

BOWLING SNOWMAN INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 1 pkg of asst. color clips (replacement)
- 1 black 4 point controller
- 2 wing bolts

Take entire display out of box. . Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Plug in the Snowman, Bottom penguins, and bag (non animated parts) into an extension cord. You will notice these plugs are not marked.
2. Plug in animated parts. First plug the controller into an extension cord. The first bowling ball marked Green 1 will plug into the female controller plug marked Green 1. Plug the ball marked Red 2 into Red 2 on the controller. Plug ball marked Yellow 3 into Yellow 3 on the controller. Plug last ball and top penguins marked Blue 4 into Blue 4 on the controller. Adjust speed to your liking

***see below about polarization issues.

*** If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around.

Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

