

Conveyor Belt Elf INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 8 ground stakes
- 1 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 black 2 point controller (may be already attached)

Unfold display being careful not to stretch any attached wires. There is one hinge on the display on the conveyor part. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached.

Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground

First plug the conveyor belt (not packages) into an extension cord (not included). Then plug the bag of toys into an extension cord. You will notice that these two male plugs are not marked.

Then Plug in animated parts. First plug the controller into an extension cord. The presents and elves are marked Green 1 and Red 2. Plug the first present marked Green 1 into the Green 1 on the controller. Then plug the second present marked Red 2 into the Red 2 on the controller. Then Plug the elf marked Green 1 in to the back of the present plug marked Green 1 (already plugged into controller). You will need to stack the plugs. Plug the elf marked Red 2 into the back of the present plug marked Red 2. (Already plugged into the controller) Adjust speed to your liking.

***see below about polarization issues.

*** If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around.

Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

