

DIVING PENGUIN INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 7 ground stakes
- 2 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 black 4 point controller (may be already attached)

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Do this for all three pieces. Top Penguin #1 may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

Plug first plug on bottom of snow bank into an extension cord (not provided). Then plug snow bank of first pieces into snow bank on second piece, and then second snow bank into fishing hole. All non animated parts are basically plugged end to end and then plugged into an extension cord. The penguins are the only parts that plug into the black 4 point controller. Each one is labeled Green 1 and Red 2 and Yellow 3 and Blue 4. First plug the controller into an extension cord. Then plug the Green 1 into the Green 1 on the controller. *** Plug the Red 2 into the Red 2 on the controller, the Yellow 3 into the Yellow 3 on the controller and the Blue 4 into the Blue 4 on the controller. Adjust speed to your liking.

Then Plug in animated parts. First plug the controller into an extension cord. The wheels use the 3 point controller. One is labeled Green 1 and Red 2 and Yellow 3. Plug the Green 1 into the Green 1, Red 2 into the Red 2, and the Yellow 3 into the Yellow 3. Adjust speed to your liking

***see below about polarization issues. .

*** If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around. Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

Diving Penguin

Plug #1 Penguin into #1 on controller
Plug #2 penguin into #2 on controller
Plug #3 penguin into #3 on controller
Plug #4 penguin into #4 on controller
Plug remaining cords and controller
into an extension cord.

