

ELF WITH CANNON INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 6 ground stakes
- 1 pkg of asst. color clips (replacement)
- 1 black 4 point controller

Take entire display out of box.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

First, plug in the elf, cannon, and bag (non animated parts) into an extension cord. You will notice these plugs are not marked.

Then Plug in animated parts. First plug the controller into an extension cord. The first present marked Green 1 will plug into the female controller plug marked Green 1. Plug the present marked Red 2 into Red 2 on the controller. Plug present marked Yellow 3 into Yellow 3 on the controller. Plug present (top of bag) marked Blue 4 into Blue 4 on the controller. Adjust speed to your liking

***see below about polarization issues.

*** If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around.

Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.



