

GINGERBREAD JUMPING ROPE INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 5 ground stakes
- 1 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 black 2 point controller
- 1 cord set

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Lay cord set on ground. Plug cord set into an extension cord
2. Plug first gingerbread boy into the first female plug on the cord set.
3. Plug controller into second plug on the cord set.
4. Plug middle gingerbread upper body into the third plug on the cord set.(not the legs)
5. Plug the last gingerbread boy into the last female plug on the cord set. .
6. Then Plug in animated parts. *** see below about polarization
7. Each set of legs is marked with either a Green 1 or a Red 2. Each Jump rope is also labeled with either a Green 1 or a Red 2. Plug Green 1's into Green 1 on the controller.
You will need to stack the plugs.
8. Then Plug Red 2's into Red 2 on controller.
9. Adjust speed to your liking

*** If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around.

Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.



