

GINGERBREAD SOCCER INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 5 ground stakes
- 4 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 cord set
- 1 black 4 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Do this for all four pieces. This display may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

Plug first Cord set into and extension cord and lay it out behind the display. Then plug the first Gingerbread player on the right into the first female plug at the end of the cord set. Then plug the controller into the second female plug on the cord set. Plug the remaining Gingerbread man (one with net) into the last female plug on the cord set. Each Soccer ball is labeled with a color coded number. *** Two are labeled Green 1 and Red 2 and Yellow 3 and Blue 4. Plug the Green 1 into the Green 1 on the controller. Then plug the second plug labeled Green 1 into the back of the Green 1 in the controller. . Plug all Red 2 into the Red 2 on the controller, all Yellow 3 into the Yellow 3 on the controller and Blue 4 into the Blue 4 on the controller. Adjust speed to your liking.

*****see below about polarization issues. .**

*** If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around. Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

