

## GINGERBREAD ON SLIDE INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 4 ground stakes
- 2 wing bolts
- 1 pkg of asst. color clips (replacement)
- 1 black 4 point controller

Unfold display being careful not to stretch any attached wires. There are two hinges on the display one on each side. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Gingerbread on Slide will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

First plug slide part into an extension cord (not included). There is a male plug at the bottom that is unmarked. At the top of the ladder there is a male and a female plug. Plug them together. There is a plug that comes from the slide part. (See picture) Plug this into the back of the male plug. There will be three plugs stacked together.

Then Plug in animated parts.\*\*\* Each Gingerbread man has a male plug that is labeled either Green 1 , Red 2, Yellow 3, or Blue 4. First plug the controller into an extension cord. Plug the Green 1 into the Green 1 on the controller, Red 2 into the Red 2, Yellow 3 into the Yellow 3 and Blue 4 into Blue 4. . Adjust speed to your liking

\*\*\* If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around.

Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

