

## GINGERBREAD VOLLEYBALL INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 1 pkg of asst. color clips (replacement)
- 1 Silver 1-4 reverse controller
- 1 cord set

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Do this for the Gingerbread, balls and net.. The net may need extra support which is not included. You can do this by driving a metal or wooden stake behind the net and attaching it to the stake with a cable tie.

After you have it set up in the ground, place the cord set on the ground (behind the decoration looks best).

1. First, plug the cord set into an extension cord. Starting a with the first gingerbread person, plug the Gingerbread into the first female plug on the cord set.
2. Then at the second female plug on the cord set , plug the volleyball net into this female outlet.
3. Then Plug the controller into the 3<sup>rd</sup> female plug on the cord set.
4. Then Plug the last Gingerbread person into the last female plug on the cord set.
5. The balls will plug into the controller. Each ball is labeled Green 1, Red 2, Yellow 3 or blue 4. Plug the Green 1 into Green 1 on the controller, Red 2 into Red 2, Yellow 3 into Yellow 3 and Blue 4 into Blue 4.
6. You can adjust the speed on the controller to your liking.

. For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

