

HAUNTED HOUSE INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 2 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 black 4 point controller

Unfold display being careful not to stretch any attached wires. There are two hinges on the display one on each side. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Haunted House will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

First plug in house part (non animated part). There are two male plugs that are unmarked at the bottom of the house. Stack these plugs and then plug them into an extension cord (not provided). Then Plug in animated parts. First plug the controller into an extension cord. First plug all female plugs marked Green 1 into the Green 1 on the controller. You will need to stack the plugs. *** Please see part about polarization below. There will be 3 of them. Then find all female plugs marked Red 2 and plug them into Red 2 on the controller. There are also 3 of these. Find all plugs marked Yellow 3 and plug them into Yellow 3 on the controller (2 of them) and Blue 4 into Blue 4 on the controller. There are 2 of them. Adjust speed to your liking
***see below about polarization issues. .

*** **If you plug any of these into the controller and the light does not come on**, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around. Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

