## Merry Christmas Animated

Unfold display being careful not to stretch any attached wiring. If there are hinges on the display attach two small plates at hinge together with a wing bold and wing nut. Attach ground stakes into tubes at the bottom of the display and secure with a wing nut. Push ground stakes gently into the ground. You can do this with your foot using a back and forth motion to inch each side gradually into the ground. Connect the power source and controller to the piece. Connect both sections together in the middle of the piece Plug in your piece!

## Parts and pieces.

- 1 power source
- controller

6 ground stakes

- 9 wing nuts
- 3 wing bolts

