

NORTH POLE ARCH INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 4 ground stakes
- 4 wing bolt
- 1 pkg of asst. color clips (replacement)
- 2 black 2 point controller (may be already attached)
- Cord set

Unfold display being careful not to stretch any attached wires. There are four hinges on the display. Rudolph has one hinge, Santa has one hinge and the North Pole in center has two hinges. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

North Pole Arch will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

First lay out cord set. Then starting with Rudolph, plug Rudolph's body into first female plug on cord set. Then plug one of the 2 point controllers into the next plug on the cord set. Plug Rudolph's arms into the controller. ***Green 1 into Green 1 and Red 2 into Red 2. Then plug the male plug from the top corner of the North Pole into the cord set. Next, plug the other 2 point controller into the cord set. Plug Santa's arms into the controller. Plug Santa's body into the last female plug on the cord set Adjust speed on controllers to your liking

*** If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around.

Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.



