

SANTA'S AIRPLANE WITH BANNER

Please check that you have all parts. (Located in attached bag)

- 4 ground stakes
- 2 wing bolt / 6 wing nuts
- 1 pkg. of asst. color clips (replacement)
- 1 gray 3 point controller (may be already attached)

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

1. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.
2. Plug Airplane body into and extension cord. (Not provided).
3. Plug controller into and extension cord.
4. There are 3 plugs coming from the Propellers are labeled Green 1 and Red 2 and Yellow 3.
5. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller, the Yellow 3 into the Yellow 3 on the controller. Adjust speed to your liking.
6. Plug Ho Ho Ho Banner in to an extension cord

Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

