

SEA MONSTER

Please check that you have all parts. (Located in attached bag)

- 10 ground stakes
- 13 wing nuts
- 3 wing bolt
- 1 pkg. of asst. color clips (replacement)
- 1 gray 2 point controller

Unfold display being careful not to stretch any attached wires. There are two hinges on the display. One hinge is on the head of the monster and one is on the tail of the monster. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Sea Monster may need extra support for the head and tail which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. First plug in Sea monster tail (bottom part) into and extension cord (not included) both humps and head (non animated parts). Each piece connects end to end starting with the tail male plug that is unmarked.
2. Then Plug in animated parts. First plug the controller into an extension cord. Then plug the flames into the controller. The flames are marked Green 1 and Red 2 Plug Green 1 to Green 1 on the controller and Red 2 into Red 2 on the controller. The tails have two long cords marked Green 1 and Red 2. The flames have two female plugs marked Green 1 and Red 2. Plug the tail Green 1 into the flame Green 1 (female plug). Then plug the tail Red 2 into the flame Red 2 (female plug). Adjust speed to your liking.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

