

# SLIDING PENGUIN

Please check that you have all parts. (Located in attached bag)

- 4 ground stakes
- 2 wing bolt 6 wings
- 1 pkg. of asst. color clips (replacement)
- 1 gray 3 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This display may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. Plug Igloo into an extension cord.
2. Then plug bottom snow pile (under penguin feet) into the extension cord. You can stack the plugs to do this.
3. Plug controller into an extension cord.
4. The penguins are the only parts that plug into the gray 3 point controller. Each one is labeled either Green 1 and Red 2 and Yellow 3.
5. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller, the Yellow 3 into the Yellow 3 on the controller.
6. Adjust speed to your liking.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

