

SANTA'S FIRE ENGINE

INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 3 ground stakes
- 2 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 black 3 point controller (may be already attached)
- 1 black 2 point controller (may be already attached)
- 1 cord set

Unfold display being careful not to stretch any attached wires. There are two hinges on the display one on each side. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Santa's Fire Engine may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

First, lay out your cord set on the ground with the Male end at the back of the fire engine. Plug the male end into an extension cord. Plug in upper truck part (non animated part). There are two male plugs on the fire engine that are unmarked. Plug the unmarked plug closest to the back wheel into the 1st female plug on the cord set. Then plug the unmarked plug at the front wheel to the last female plug on the cord set.


Then Plug in animated parts. First plug the 3 point wheel controller into the cord set. One is labeled Green 1 and Red 2 and Yellow 3. Plug the Green 1 into the Green 1, Red 2 into the Red 2, and the Yellow 3 into the Yellow 3. Adjust speed to your liking

***see below about polarization issues. .

The dog's ears and the Santa's hands will use the 2 point controller. Each one is labeled Green 1 and Red 2. First plug the controller into the cord set. Then plug the Santa's hand labeled Green 1 into the female controller plug labeled Green 1. Plug the Santa's hand labeled Red 2 into the female controller plug labeled Red 2. Now plug the Dog's ears into the controller. You will need

to stack the plugs. You will plug the Green 1 into the back of the Green 1 on Santa's hand that plugs into the female plug Green 1. Then the ear marked Red 2 will plug into the back of the Santa's hand plug marked Red 2 that is plugged into the controller. Adjust speed to your liking.

*** If you plug any lights into the controller and the light does not come on, for ex., you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around. Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight. For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

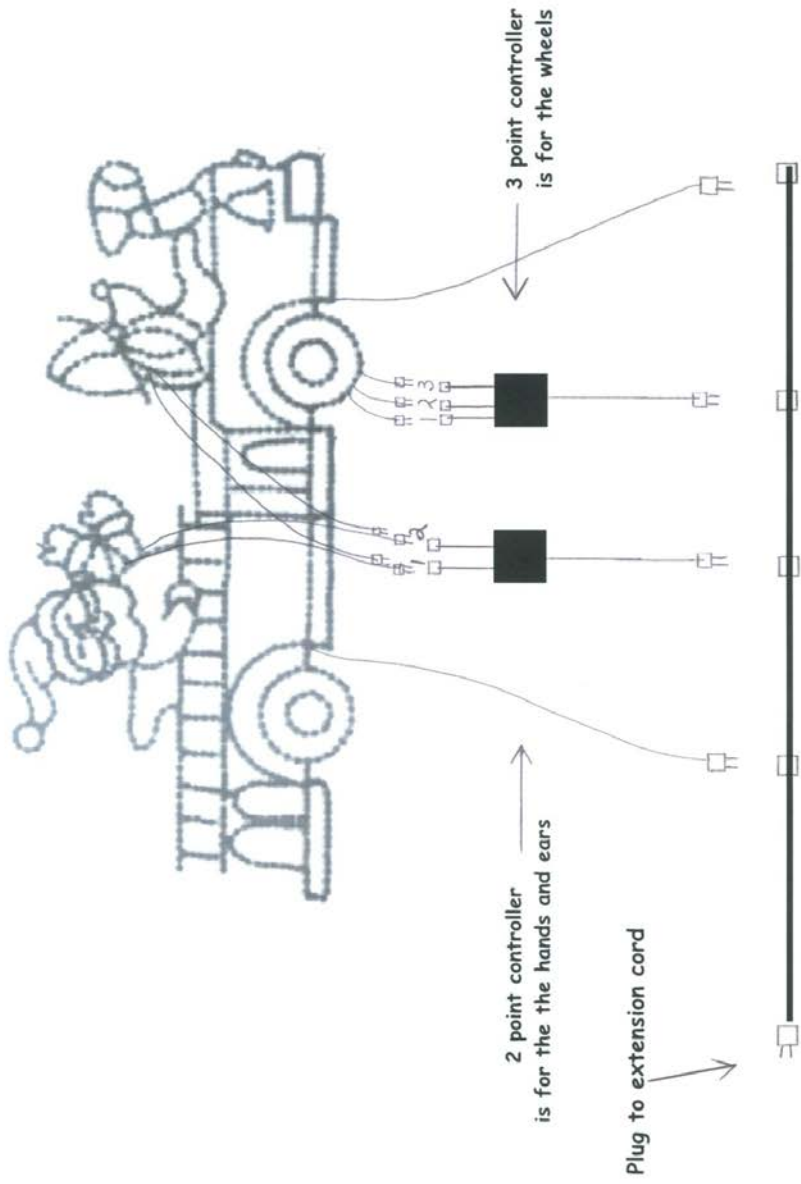

cord set