

SNOW GLOBE INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 4 SHORT ground stakes
- 2 LONG ground stakes(for snowman)
- 2 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 black 4 point controller

Unfold display being careful not to stretch any attached wires. There are two hinges on the display one on each side. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes of each globe side gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Snow Globe may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie. You may need a twist tie or cable tie to attach two globe halves together.

Place snowman centered in the middle of the display.


First plug in globe part (non animated part).There are two male plugs that are unmarked. Stack these plugs and then plug them into an extension cord (not provided). Then plug in the snowman male plug into the back of the globe plugs. All three male plugs will be stacked and then plugged into an extension cord.

Then Plug in animated parts. First plug the controller into an extension cord. *** The snowflakes use the 4 point controller. There are a total of 8 male plugs. Each are labeled Green 1 and Red 2 and Yellow 3 and Blue 4. Plug all Green 1's into the Green 1 on the controller (you will need to stack the plugs , Red 2's into the Red 2 , and the Yellow 3's into the Yellow 3 and Blue 4's into Blue 4. . Adjust speed to your liking


*** PLEASE READ- If you plug any of these into the controller and the light does not come on, for example, you plug up Green 1 to Green 1 and the lights do not come on, you need to turn that plug around. Some controllers have a polarity issue. IF the polarity is crossed it will not light. So by turning the prongs around, it will line up the polarity and the lights will come on. We have

also placed a dot on the controller plug and a dot on the decoration plug. If you line these dots up, then it will keep the polarity straight.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

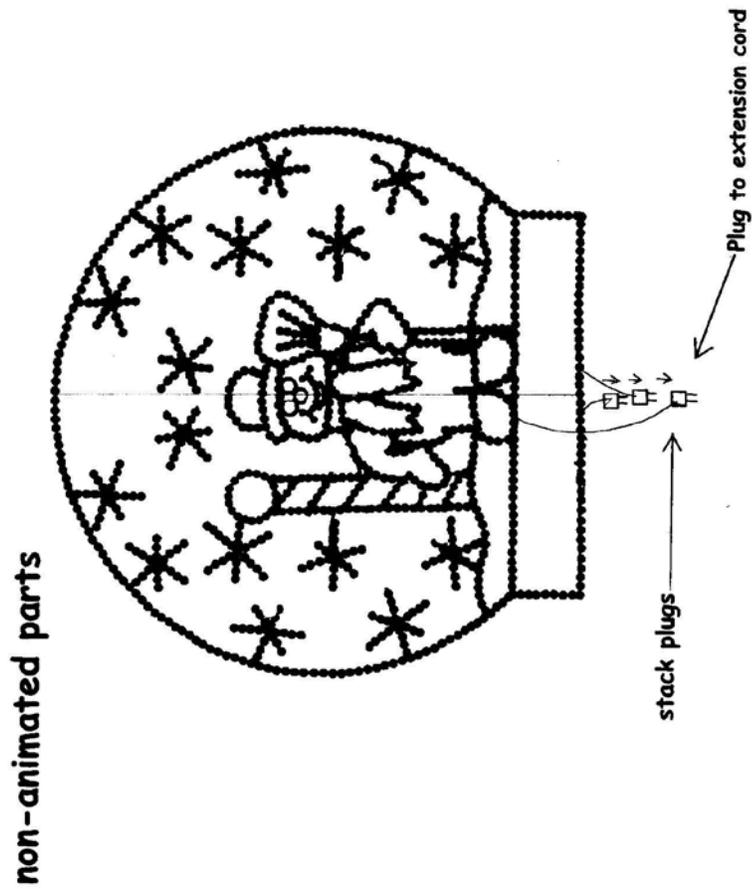

animated parts

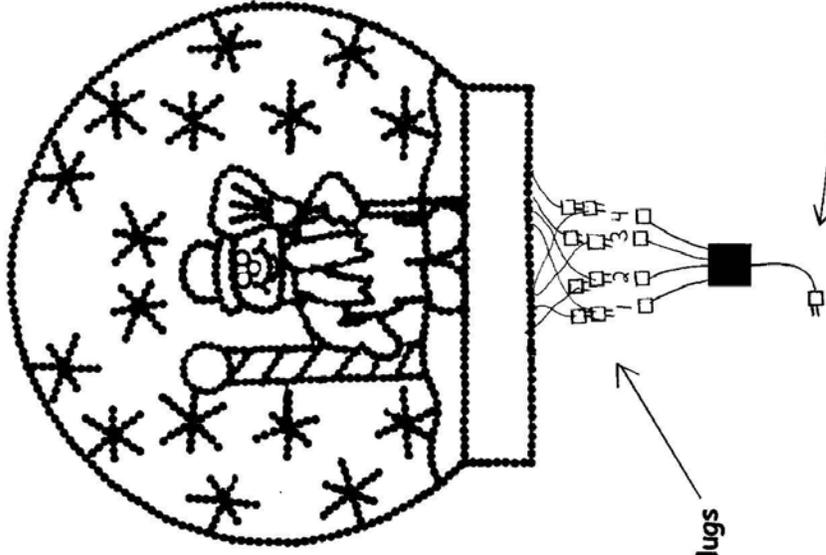

stack plugs

Plug to extension cord