

WATERFALL DEER

Please check that you have all parts. (Located in attached bag)

- 6 ground stakes
- 4 wing bolts
- 10 wing nuts
- 1 pkg of asst. color clips (replacement)
- 1 gray 3 point controller

Unfold display being careful not to stretch any attached wires. There are two hinges on the display. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Waterfall deer will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. Plug Deer side (right) in an extension cord
2. Plug controller into and extension cord.
3. There are 6 male plugs that come out of the water side that are marked either Green 1 or Red 2 or Yellow 3.
4. Plug both of the Green 1 into the Green 1 on the controller (you will have to stack the plugs), both of the Red 2 into the Red 2, Yellow 3 into the Yellow 3 .Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

