


Winter Cardinal

Unfold display being careful not to stretch any attached wiring. If there are hinges on the display attach two small plates at hinge together with a wing bolt and wing nut. Attach ground stakes into tubes at the bottom of the display and secure with a wing nut. Push ground stakes gently into the ground. You can do this with your foot using a back and forth motion to inch each side gradually into the ground.

connect plugs end to end.
green 1 to green 1. red 2
to red 2. yellow 3 to
yellow 3.

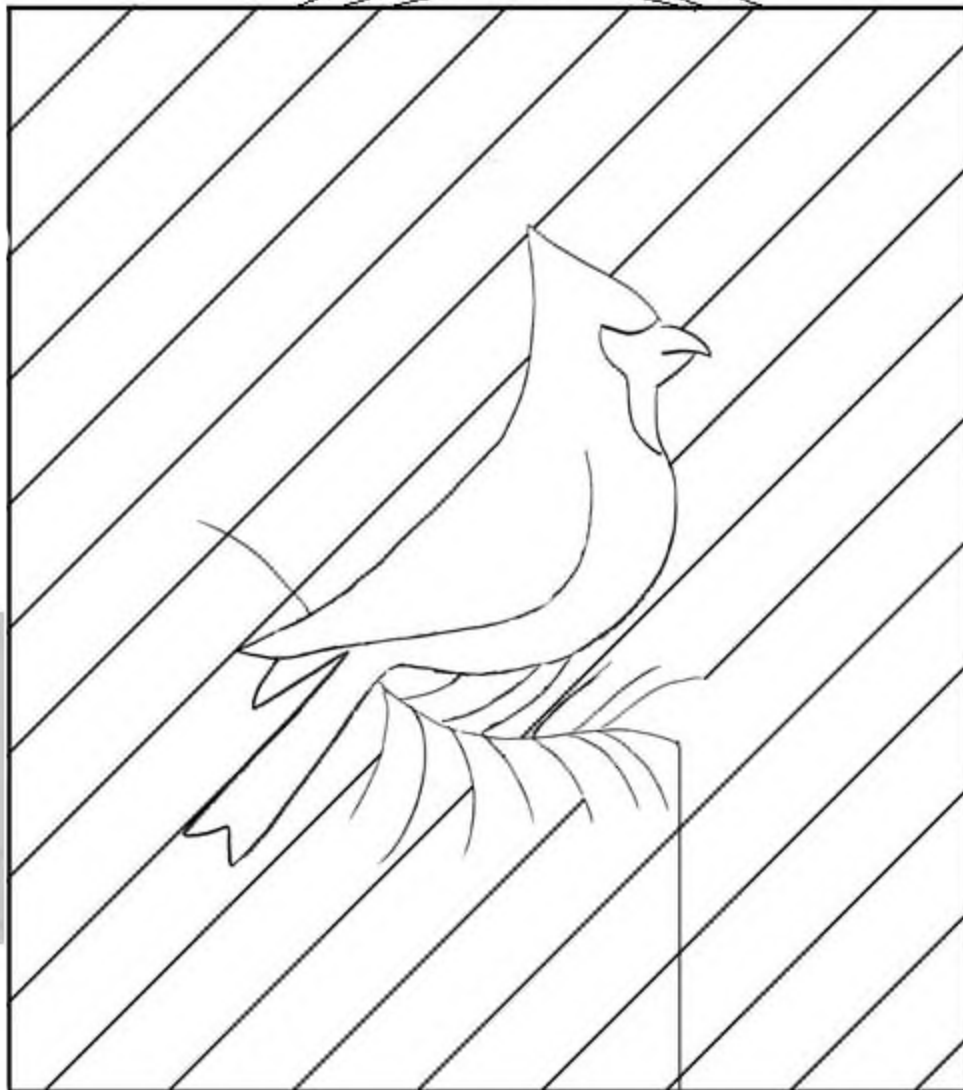

Please check that you have all the parts and extra clips (located in attached bag).

- 4 ground stakes
- 5 wing bolts
- 9 wing nuts
- 1 3-point controller

Plug green 1
Controller 1.
Plug Red 2 into
Controller 2.
Plug Yellow 3
into controller 3

plug into extension cord

