


Workbench elves

Unfold Display being careful not to stretch any attached wiring.
IF there are hinges on the display, attach two small metal plates at hinge together with a wing bolt and wing nut. Attach ground stakes into tubes at the bottom of the display and secure with a wing nut. Push Ground stakes gently into the ground. You can do this with your foot using a back and forth motion to inch each side gradually into the ground



Please check that you have all parts (located in attached bag)
3 Ground stakes
2 Wing Bolts
5 Wing nuts
2 point controller

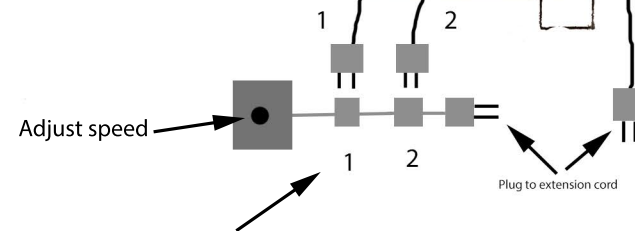

Plug Green 1 to Green 1
Plug Red 2 to Red 2
You will need to stack