

# Ballerina INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 2 ground stakes
- 1 pkg of asst, color clips (replacement)
- 1 Wingbolts
- 1 gray 2 point controller

Unfold display being careful not to stretch any attached wires. There is 1 hinge on the display.

Attach two small metal plates at hinge together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by placing them into the bottom provided slots and use wing nut to tighten. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This item may need extra support which is not included.

1. Plug Ballerina BODY (unmarked plug) into an extension cord.
2. Plug controller into an extension cord.
3. There is a plug coming from The Arms labeled Green 1 and Red 2. Plug the Green 1 into the Green 1 on the controller, plug the Red 2 into the Red 2 slot on controller.
4. There is a plug coming from The Legs labeled Green 1 and Red 2. Plug the Green 1 into the Green 1 on the controller, plug the Red 2 into the Red 2 slot on controller.

Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

