

CONVEYOR BELT ELF INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 9 ground stakes
- 1 wing bolt
- 1 pkg. of asst. color clips (replacement)
- 1 gray 2 point controller

Unfold display being careful not to stretch any attached wires. There is one hinge on the display on the conveyor part. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by placing them into the sleeves at bottom of decoration / screw on wing nuts.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. First plug the conveyor belt (not packages) into an extension cord (not included). Then plug the bag of toys into an extension cord. You will notice that the two male plugs are not marked.

2. Then Plug in animated parts. First plug the controller into an extension cord. The presents and elves are marked Green 1 and Red 2. Plug the first present marked Green 1 into the Green 1 on the controller. Then plug the second present marked Red 2 into the Red 2 on the controller. Then Plug the elf marked Green to the back of the present plug marked Green 1 (already plugged into controller). You will need to stack the plugs. Plug the elf marked Red 2 into the back of the present plug marked Red 2. (Already plugged into the controller) Adjust speed to your liking.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

