

Elf Catching Reindeer Instructions

Unfold Display being careful not to stretch any attached wiring.
IF there are hinges on the display, attach two small metal plates at hinge together with a wing bolt and wing nut. Attach ground stakes into tubes at the bottom of the display and secure with a wing nut. Push Ground stakes getnly into the ground . You can do this with your foot using a back and forth motion to inch each side gradually into the ground

