

Elf Excavator

Please check that you have all parts. (Located in attached bag)

- 8 ground stakes
- 5 wing bolts
- 1 pkg of asst. color clips (replacement)
- 1 grey 4 point controller
- 13 nuts
- 4 jumper cords

Unfold display being careful not to stretch any attached wires. On each hinge attach two small metal plates at hinges together by screwing wing bolt into metal plates

Elf Excavator will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie. Attach ground stakes by placing them into the bottom provided slots and screwing the nut onto the ground stake.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Plug controller into an extension cord.
2. On the left side of the display there are 4 male plugs marked Green 1, Red 2, Yellow 3, and Blue 4. Plug Green 1 into Green 1 on the controller. Plug Red 2 into Red 2, Yellow 3 into Yellow 3 and Blue 4 into Blue 4.
3. On the Right side of the display, there are also 4 male plugs marked Green 1, Red 2, Yellow 3 and Blue 4. These will be plugged into the backs of the male plugs you just plugged into the controller. The plugs will be stacked. (see picture)
4. The unmarked male plug at the bottom does not plug into a controller.
5. Adjust speed to your liking.
6. For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

