

# Elf in the Hay

Please check that you have all parts. (Located in attached bag)

- 5 ground stakes
- 3 wing bolts
- 8 wing nuts
- 1 pkg of asst. color clips (replacement)
- 1 gray 2 point controller
- 1 jumper cord

1. Attach ground stakes by placing them into the bottom provided slots. Then use wing bolts to secure them in place. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This item will need extra support which is not included.
2. Plug Hay Stack (not top elf) into an extension cord. Plug Elf with Pitchfork Body only into an extension cord.
3. Plug controller into an extension cord.
4. There are 2 plugs coming from the arms with pitchforks labeled Green 1 and Red 2. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller.
5. The Top Elf on the Hay has a male plug labeled Red 2. Plug Red 2 into the back of the Red 2 arm with pitchfork. You will have to stack the plugs. .

Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

