

# ELF WITH LASSO Instructions

Please check that you have all parts. (Located in attached bag)


- 2 ground stakes
- 1 pkg of asst. color clips (replacement)
- 1 gray 3point controller
- 2 wing bolts

Take entire display out of box. Unfold the display at hinges, and use wing bolts to secure.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This item may require extra support which is not included.

1. Plug in ELF BODY (non-animated parts) into an extension cord as directed in photo below. You will notice this plug is not marked.
2. Plug in animated parts (LASSO). First plug the controller into an extension cord. Each cord is marked either Green 1 or Red 2 or Yellow 3. Plug Green 1 male plug into the controller socket marked Green 1. Plug the male plugs marked Red 2 into Red 2 on the controller. Plug the male plugs marked Yellow 3 into Yellow 3 on the controller.
3. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

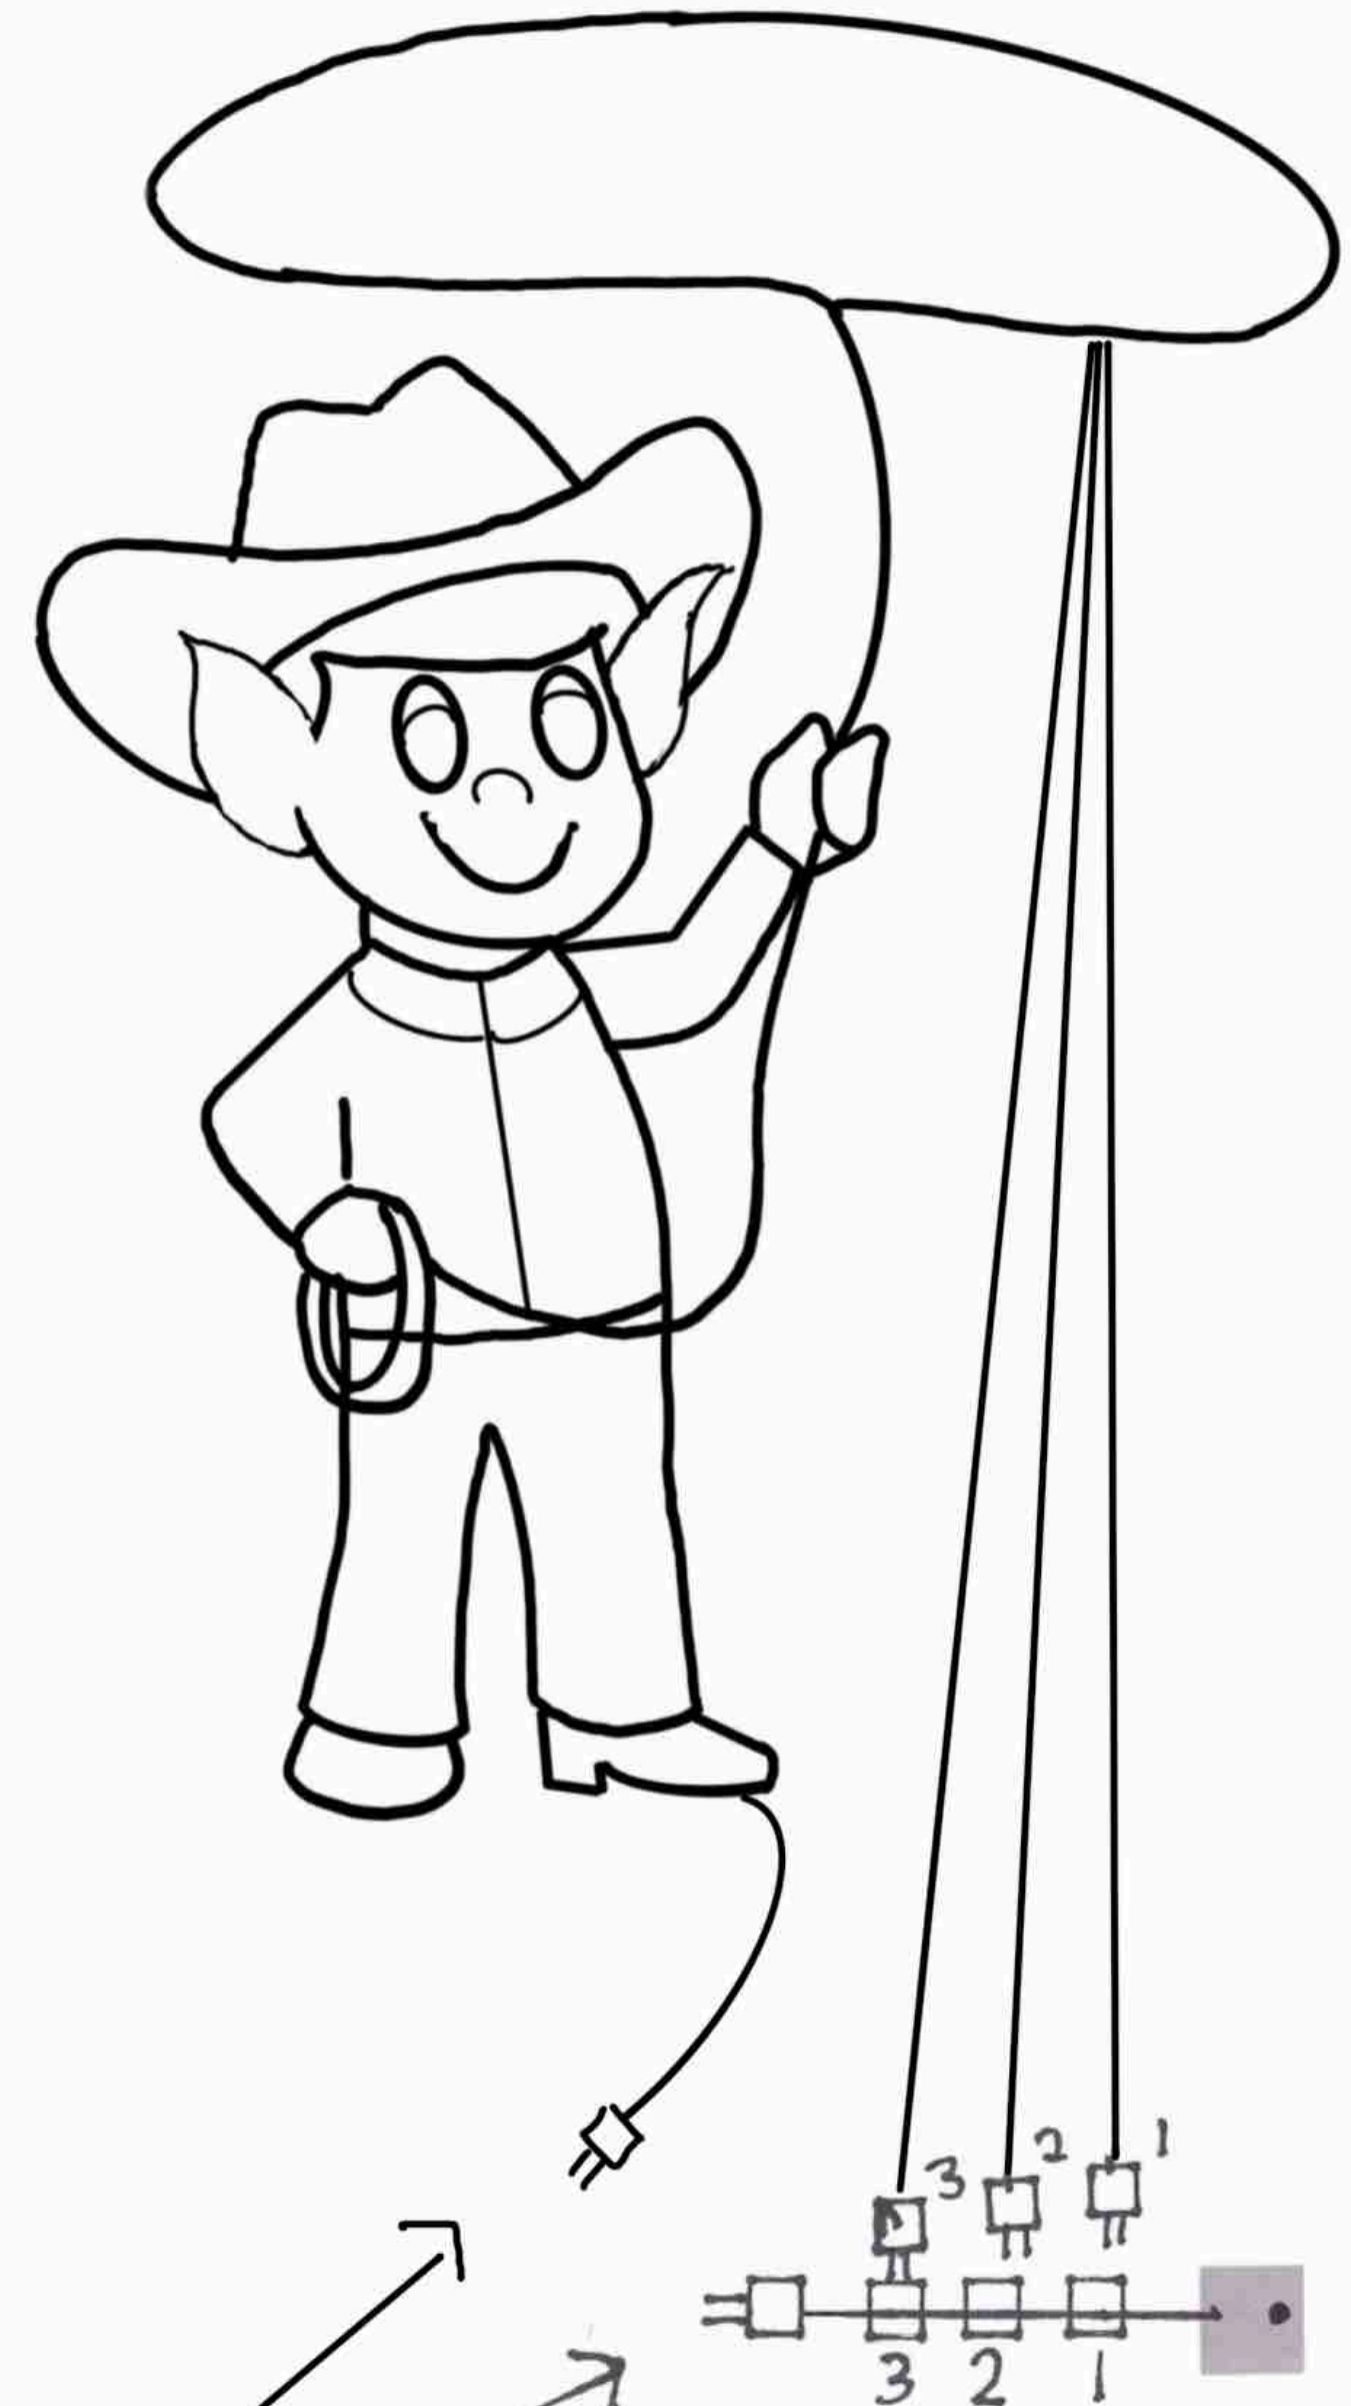

plug into extension cord