

# FLASH THE CHRISTMAS DOG

Please check that you have all parts. (Located in attached bag)

- 1 pkg. of asst. color clips (replacement)
- 2 ground stakes
- 1 gray 2 point controller

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. First plug the body of the dog (non- animated) part to an extension cord (not included).
2. Plug controller to an extension cord.
3. Each tail has a male plug which labeled either Green 1 or Red 2. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller. Adjust speed to your liking

