

# HIPPOPOTAMUS FOR CHRISTMAS INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 2 ground stakes
- 2 Wing bolt
- 1 pkg. of asst. color clips (replacement)
- 1 gray 2 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Make sure bolt is on opposite side of the nut which is attached. Do not screw bolt into the side with the nut first. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench. Hippo will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.
2. Plug Hippo body into and extension cord. (Not provided).
3. Plug controller into and extension cord.
4. There are 2 plugs coming from the present which are labeled Green 1 and Red 2 .Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller.
5. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

