

Unfold Display being careful not to stretch any attached wiring. If there are hinges on the display, attach two small metal plates at hinge together with a wing bolt and wing nut. Attach ground stakes into tubes at the bottom of the display and secure with a wing nut. Push Ground stakes gently into the ground. You can do this with your foot using a back and forth motion to inch each side gradually into the ground.

- Parts:
- 8 Ground stakes
 - 5 Wing Bolts
 - 13 Wing Nuts
 - 1 3-point controller
 - 1 2-point controller
 - 1 Cord set

