

- Parts include
- 5 ground stakes
- 4 wing bolt
- 9 Wing Nuts
- 1 pkg of asst. color clips
- 1 - 3 point controller
- 1 - 2 point controller
- 1 Cord Set

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by placing them into the bottom provided slots and securing with a wing bolt.

Place Cord set on ground between the horse and carriage.
 Plug cord set to extension cord from your power supply
 Plug the 3 point controller into the last female plug on cord set.
 Plug the Green 1 into the Green 1 on the controller.
 Plug the Red 2 into the Red 2 on the controller.
 Plug the Yellow 3 into the Yellow 3 on the controller.

Plug the 2 point controller into the first plug on the cord set
 Plug the Green 1 into the Green 1 on the controller.
 Plug the Red 2 into the Red 2 on the controller,
 Speed on both controllers are adjustable

Plug the last two unmarked plugs into the middle plug on cord set
 You will have to stack the plugs.

