

JACK IN THE BOX

Please check that you have all parts. (Located in attached bag)

- 1 pkg. of asst. color clips (replacement)
- 1 wing bolt
- 2 ground stakes
- 1 gray 1 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. First plug the box of Jack in the box (non- animated) part to an extension cord (not included).
2. Plug in controller to an extension cord.
3. Then plug in Body of Jack into the controller by plugging the Green 1 into the Green 1 on the controller. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

