

KID ON A SLED

Please check that you have all parts. (Located in attached bag)

- 6 ground stakes- 2 short, 2 medium, 2 long (shortest on first, medium on middle, longest on last)
- 3 wing bolts
- 1 pkg of asst. color clips (replacement)
- 1 3 point controller
- 2 extension cords.(May already be attached)

Unfold display being careful not to stretch any attached wires. There are 3 hinges on the display. Attach two small metal plates at hinges together by screwing wing bolt into metal plates. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Plug Kid marked Green #1 into the female controller plug marked Green #1.
2. Plug Kid marked Red #2 into the female controller plug marked Red #2
3. Plug Kid marked Yellow #3 into the female controller plug marked Yellow #3
4. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

