

# LET IT SNOW SNOWMAN

Please check that you have all parts. (Located in attached bag)

- 6 ground stakes
- 3 wing bolts
- 9 wing nuts
- 1 pkg of asst. color clips (replacement)
- 1 gray 3 point controller
- 1 cord set

Unfold display being careful not to stretch any attached wires. There are 3 hinges on the display. Attach two small metal plates at hinges together by screwing wing bolt and nut into metal plates to hold up display. Attach ground stakes by placing them in provided slots on the bottom and secure with a wing nut.

Let It Snow Snowman will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. First plug cord set into an extension cord.
2. Plug unmarked plug from snowman's foot into last female plug on cord set.
3. Plug controller into first female plug on cord set.

Then Plug in animated parts to the controller. There are 3 male plugs marked Green 1, Red 2, and Yellow 3 . Plug Green 1 into Green 1 on the controller. Plug Red 2 into Red 2 , and Yellow 3 into Yellow 3 on the controller. Adjust speed to your likingFor the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want take extra precaution to cover your controllers

