


Set UP instructions:

Do not plug anything into power until the final step

YOU WILL NOT NEED TO ADJUST THE POWER SOURCE CORD UNTIL THE FINAL STEP

Step 1: Unbox your piece and connect cords according to illustration on Page 1 of instructions.

Step 2: Make sure animation controller switch is set to ON .

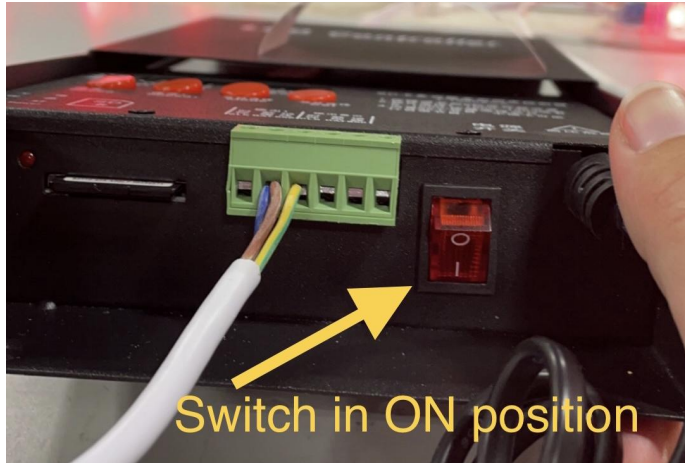

Step 3: Locate your SD card. Place INTO SD Card slot on animation controller.



note: your Sd card may already be located in the correct slot. If this is the case, skip step 3.

power source and animation controller **MUST** be unplugged when placing or removing SD Card

Step 4: Plug-in animation controller BEFORE power source.

Step 5: Plug in power source

Troubleshooting:

If your piece is not animating correctly. Ensure 'SET' function is set to 1903. Set function must always be set to 1903.



Make sure mode is set to P-01.