


North Pole Railroad Crossing

Unfold display being careful not to stretch any attached wiring. If there are hinges on the display attach two small plates at hinge together with a wing bolt and wing nut. Attach ground stakes into tubes at the bottom of the display and secure with a wing nut. Push ground stakes gently into the ground. You can do this with your foot using a back and forth motion to inch each side gradually into the ground.

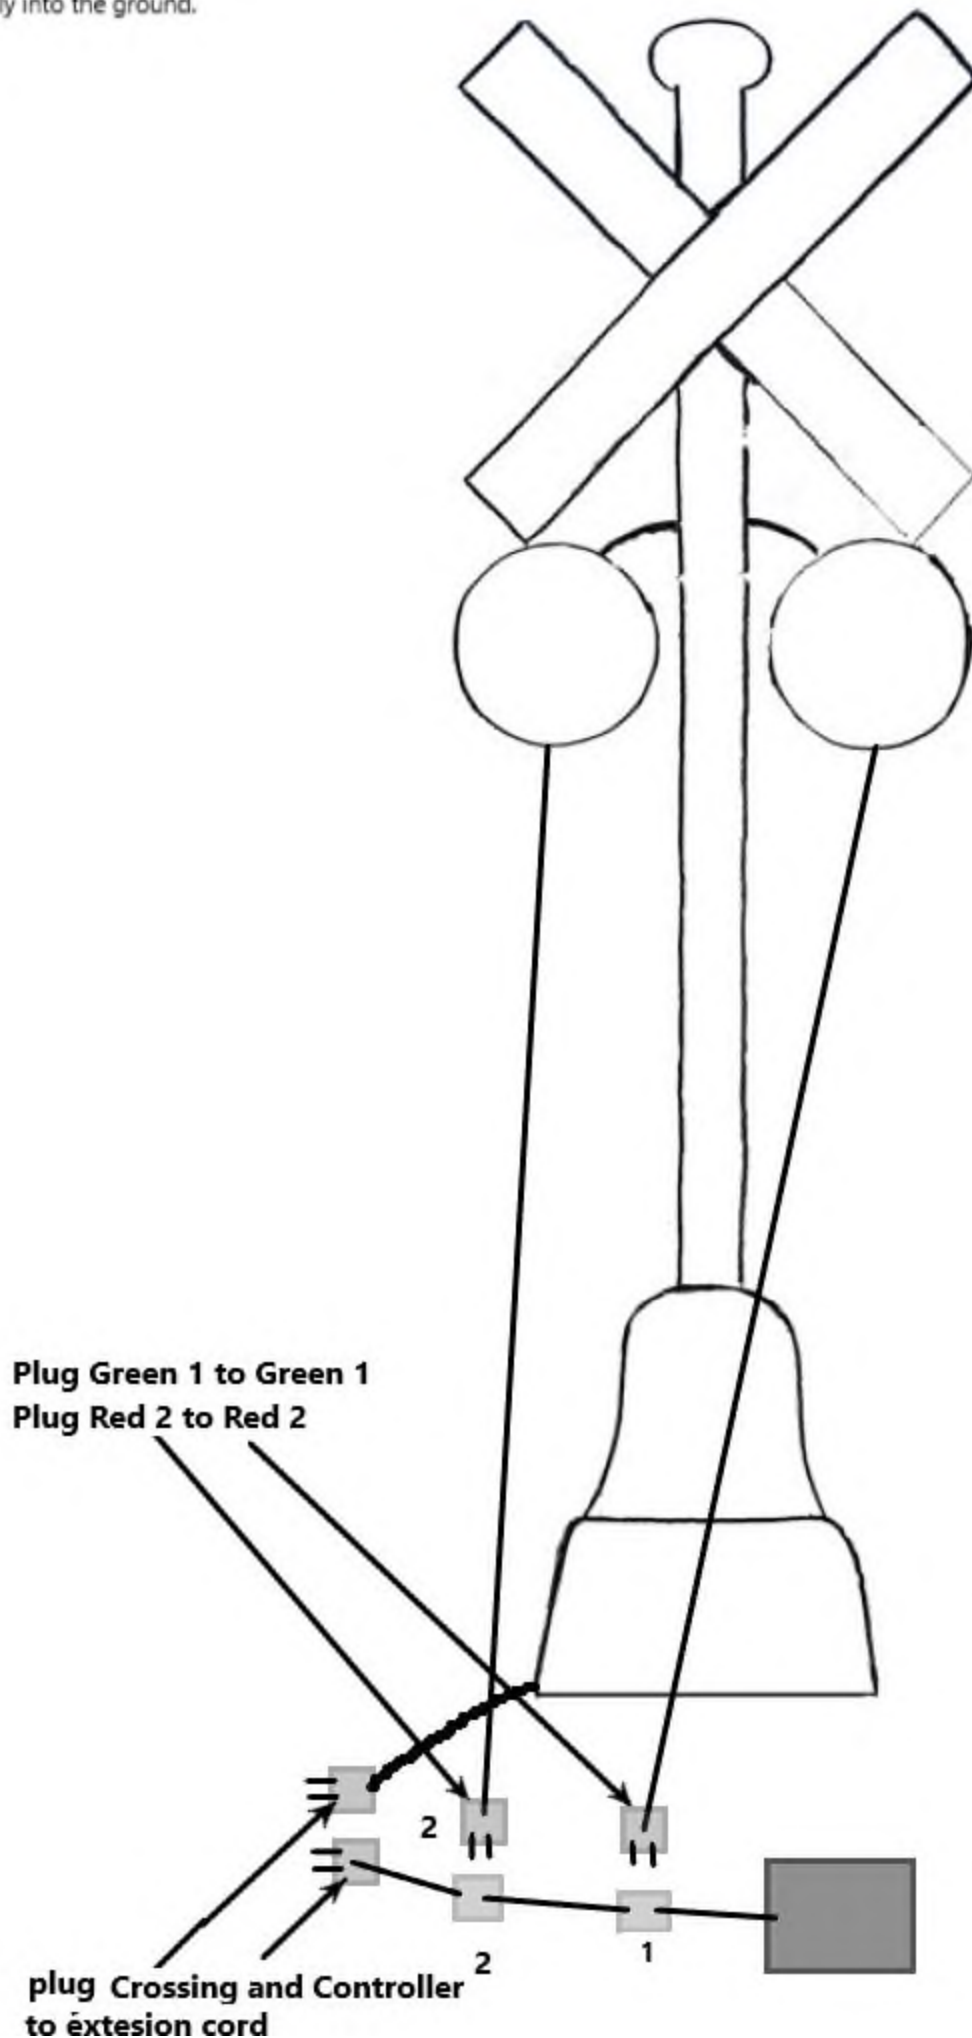

Please check that you have all parts (located in attached bag)

- 2 Ground Stakes
- 1 Wing bolt
- 3 Wing Nuts
- 1 Grey 2 point Controller