

Parts included
 6 Wing Bolts
 16 Wing Nuts
 10 Ground stakes
 1 - 3 point controller

Unfold display being careful not to stretch any attached wires.
 Attach two small metal plates at hinge together by screwing wing bolt into metal plates. Attach ground stakes by placing them into the bottom provided slots and securing with a wing nut. This item will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

