

# O'HOLY NIGHT

Please check that you have all parts. (Located in attached bag)

- 2 ground stakes
- 2 wing bolts
- 4 wing nuts
- 1 pkg of asst. color clips (replacement)
- 1 gray 4-point controller

Unfold display being careful not to stretch any attached wires. On each hinge attach two small metal plates at hinges together by screwing wing bolt into metal plates. Attach ground stakes by placing them into the bottom provided slots and screwing the nut onto the ground stake. If the metal on the frame prevents you from turning the wing nut, you may need to turn the ground stake instead.

O' Holy Night will need extra support which is not included. You can do this with extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Plug controller into an extension cord.
2. There are 8 male plugs marked Green 1, Red 2, Yellow 3, and Blue 4. Plug Green 1 into Green 1 on the controller. Plug Red 2 into Red 2, Yellow 3 into Yellow 3 and Blue 4 into Blue 4. You will need to stack the plugs.
3. The unmarked male plug at the bottom does not plug into a controller. Only the stars should blink.
4. Adjust speed to your liking.
5. For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

