


POGO ELF INSTRUCTIONS

Unfold displays being careful not to stretch any attached wires.

Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by screwing them into the bottom provided slots and securing with a wing nut. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Do this for all four pieces.

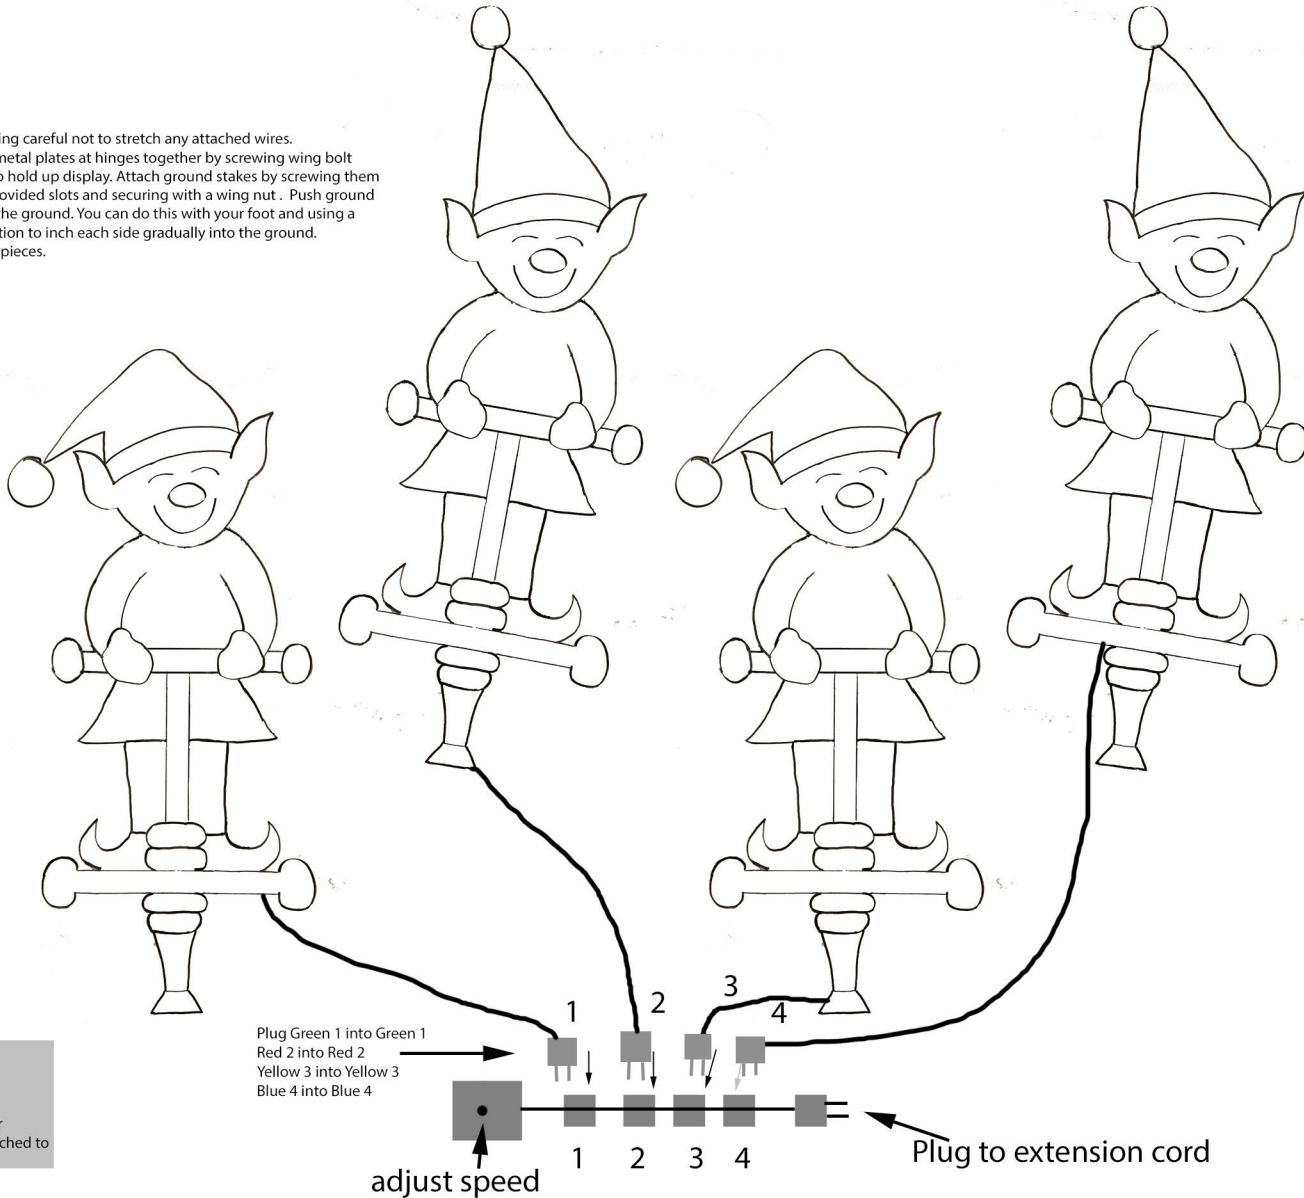

Parts included:
8 ground stakes
6 wing bolts
14 wing nuts
1-4 reverse controller
2 jumper cords (attached to #1 and #4)