

REINDEER GRANNY 4X4


Please check that you have all parts. (Located in attached bag)

- 7 ground stakes
- 6 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 gray 3 point controller (for truck)
- 1 gray 2 point controller (for Granny)
- 1 cord set

Unfold display being careful not to stretch any attached wires. There is one hinge on the display. Attach two small metal plates at hinge together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Reindeer 4x4 will need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. First plug cord set into an extension cord.
2. Plug 3 point controller into the first female plug (opposite end of male plug) on cord set.
3. Then Plug the cords marked Green 1, Red 2, Yellow 3 into the female plugs on the controller marked Green 1, Red 2, and Yellow 3.
4. Then plug the body of the truck into the 2nd female plug on the cord set.
5. Next plug the 2 point controller into the 3rd female plug on the cord set.
6. The cords from Granny's legs are marked Green 1 and Red 2. Plug Green 1 into Green 1 on the controller.
7. Plug the body of Granny into the 4th female plug on the cord set.
8. Adjust speed to your liking. For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

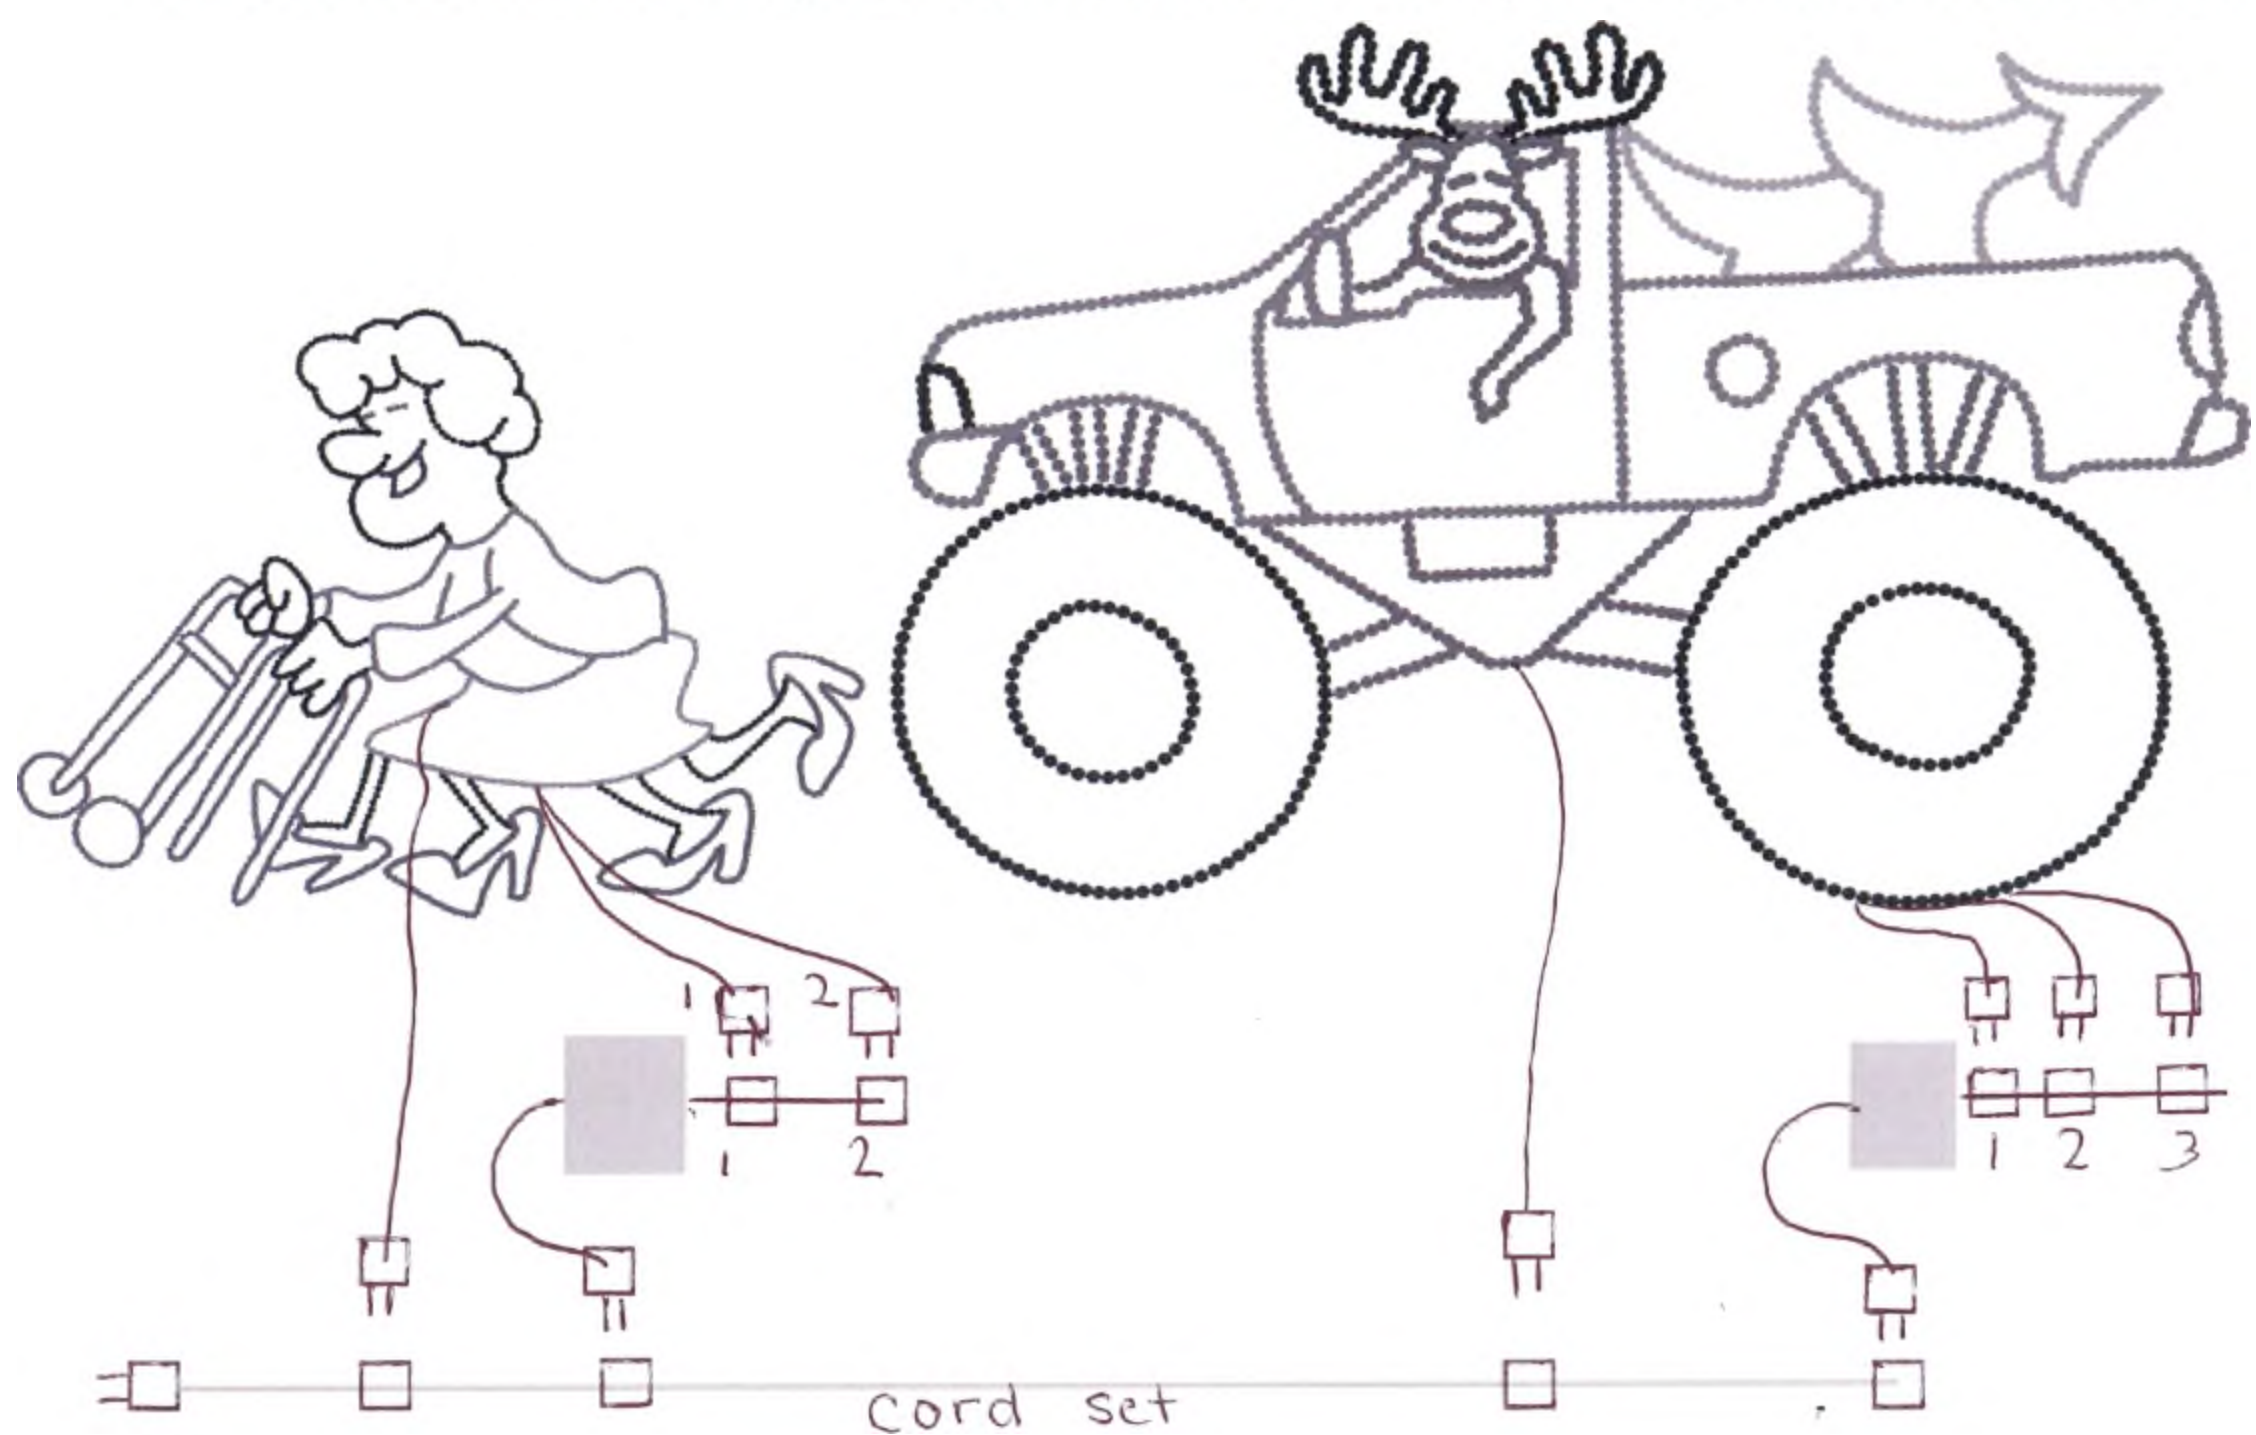

Plug to extension cord