

ROCKIN RUDY


Please check that you have all parts. (Located in attached bag)

- 1 pkg of asst. color clips (replacement)
- 1 wing bolt
- 1 gray 2 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. First plug the body of Rudy (non- animated) part to an extension cord (not included).
2. Plug in controller to an extension cord.
3. Each arm has a male plug which labeled either Green 1 or Red 2. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

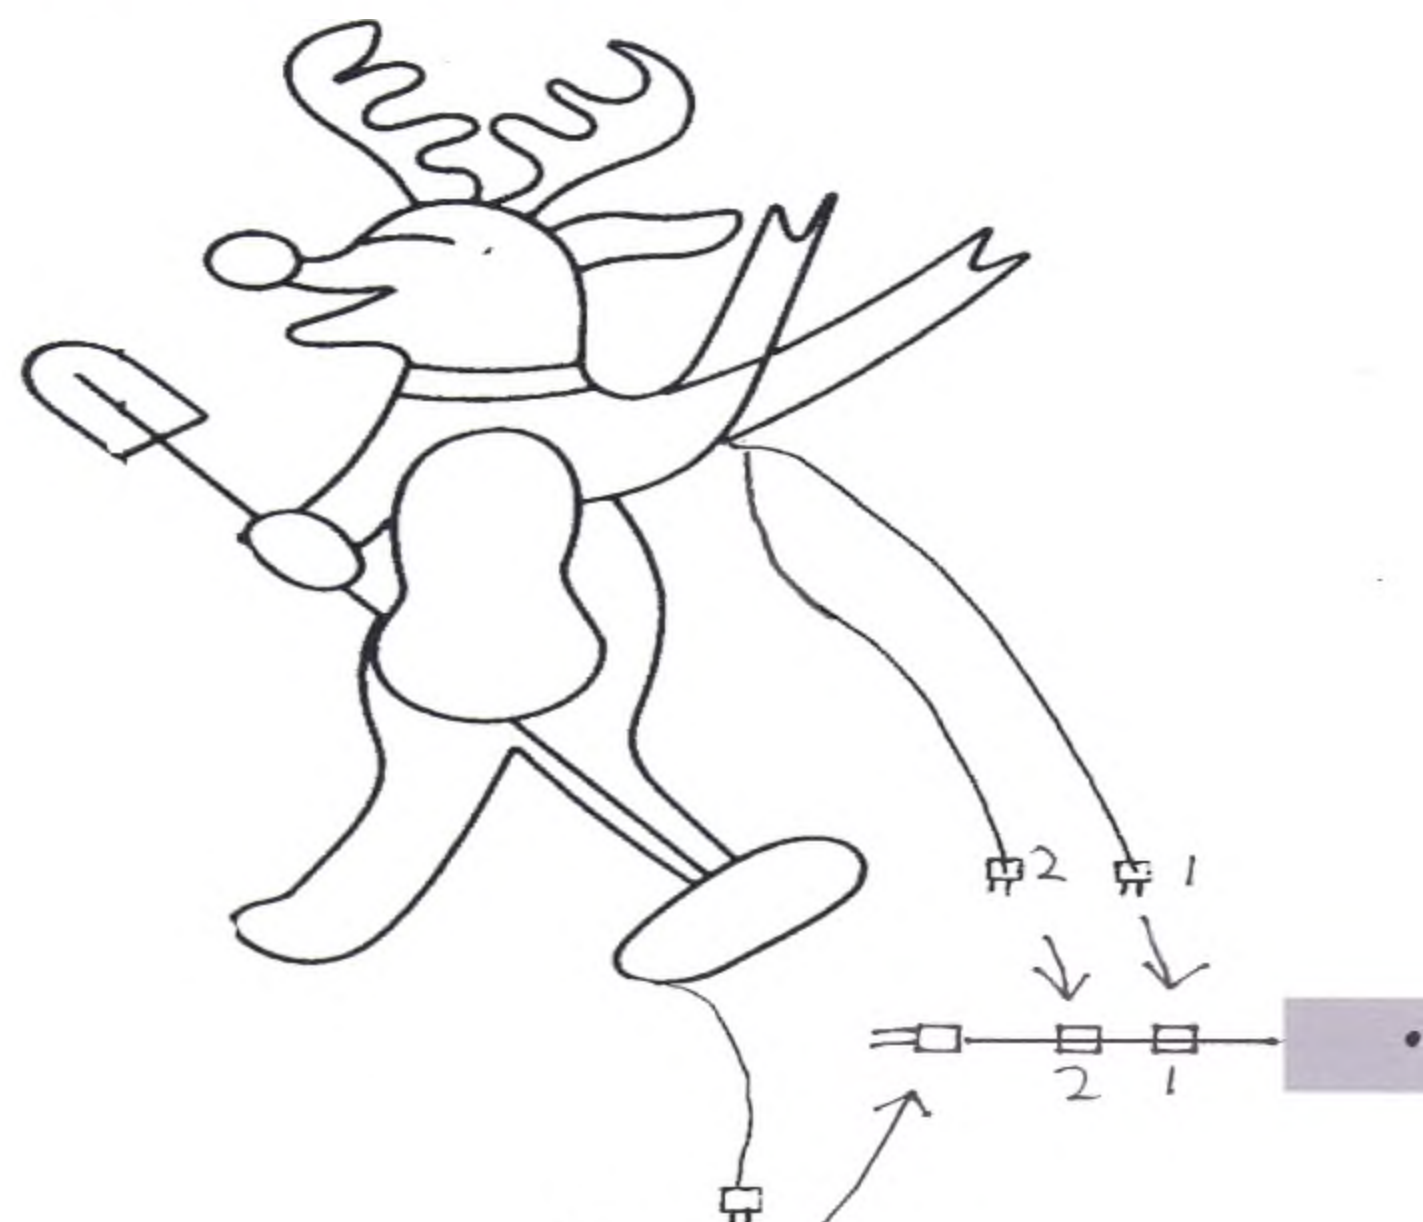

Plug to extension cord