RINGING BELL INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)

- 1 pkg. of asst. color clips (replacement)
- 1 gray 2 point controller
- 1. First plug the Bow part to an extension cord (not included).
- 2. Plug controller into an extension cord.
- 3. Each bell has a male plug which labeled either Green 1 or Red 2.
- 4. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller. Adjust speed to your preference.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

