

SANTA AND RUDY PLAYING FOOTBALL

Please check that you have all parts. (Located in attached bag)

- 6 ground stakes
- 3 wing bolt
- 1 pkg. of asst. color clips (replacement)
- 1 gray 4 point controller

Unfold display being careful not to stretch any attached wires. There are 3 hinges on the display. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Football Santa and Rudy may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. First plug Rudy body and Santa body (non animated part) to an extension cord(not included)
2. Then Plug in animated parts.
3. First plug the controller into an extension cord.
4. The footballs use the 4 point controller and are each marked Green 1, Red 2, Yellow 3, or Blue 4. Plug the Green 1 into the Green 1 on the controller***, Red 2 into the Red 2, Yellow 3 into the Yellow 3, and Blue 4 into Blue 4. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

