

SANTA'S SLEIGH AND 3 DEER

Please check that you have all parts. (Located in attached bag)

- 8 ground stakes
- 1 pkg. of asst. color clips (replacement)
- 1 gray 2 point controller
- 1 cord set

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by screwing them into the bottom provided slots on the deer and the sleigh. You may need an adjustable wrench.

Push ground stake gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Do this for the sleigh all three deer.

After you have it set up in the ground, place the cord set on the ground (behind the decoration looks best).

1. First, starting at the back of the sleigh, plug the cord set into an extension cord. (not provided)
2. Then at the first female plug on the cord set, plug the black controller into this female outlet.
3. You will see two male plugs marked Green 1 and Red 2. Plug these into the Green 1 female outlet on the controller and the Red 2 outlet on the controller.
4. The sleigh and each deer have 3 male plugs at the bottom. One is not labeled (this will light the bodies that are not animated) and two are labeled Green 1 and Red 2. For the sleigh and each deer, match each of the male plugs on the decorations to each female plug on the cord set. For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

