

SNOW GLOBE

Please check that you have all parts. (Located in attached bag)

- 4 SHORT ground stakes
- 2 LONG ground stakes(for snowman)
- 4 wing bolt
- 1 pkg of asst. color clips (replacement)
- 1 gray 4 point controller

Unfold display being careful not to stretch any attached wires. There are two hinges on the display one on each side. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes of each globe side gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Snow Globe may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie. You may need a twist tie or cable tie to attach two globe halves together.

1. Place snowman centered in the middle of the display.
2. First plug in globe part (non animated part). There are two male plugs that are unmarked. Stack these plugs and then plug them into an extension cord (not provided). Then plug in the snowman male plug into the back of the globe plugs. All three male plugs will be stacked and then plugged into an extension cord.
3. Then Plug in animated parts. First plug the controller into an extension cord. *** The snowflakes use the 4 point controller. There are a total of 8 male plugs. Each are labeled Green 1 and Red 2 and Yellow 3 and Blue 4. Plug all Green 1's into the Green 1 on the controller (you will need to stack the plugs, Red 2's into the Red 2 , and the Yellow 3's into the Yellow 3 and Blue 4's into Blue 4. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

non-animated parts

