

UNIDENTIFIED FESTIVE OBJECT (UFO) Instructions

Please check that you have all listed parts (located in attached bag):

- 3 ground stakes
- 1 pkg of assorted color clips
- 1 gray 3 point controller
- 5 wing bolts
- 3 pc frame-backing rod

Take entire display out of box. Unfold and assemble frame FACE DOWN with wing bolts. Assemble 3PC frame-backing rod. Attach frame-backing rod to back of frame with included zip ties BEFORE standing frame upright.

do not drive frame-backing rod into ground

item is large and WILL require extra support which is not included

1. Plug in SPACESHIP (non-animated portion) into an extension cord as directed in photo below. You will notice that this plug is not marked.
2. Plug in animated parts (laser beams). First, plug controller into an extension cord. Each cord is marked either Green 1 or Red 2 or Yellow 3. Plug Green 1 male plug into the controller socket marked Green 1. Plug the male plugs marked Red 2 into Red 2 on the controller. Plug the male plugs marked Yellow 3 into Yellow 3 on the controller.
3. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

