


- Parts included:
- 3 point controller
 - 2 ground stakes
 - 2 wing bolts
 - 2 wing nuts
 - Assorted clips

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by placing in tube and securing with wing nuts.

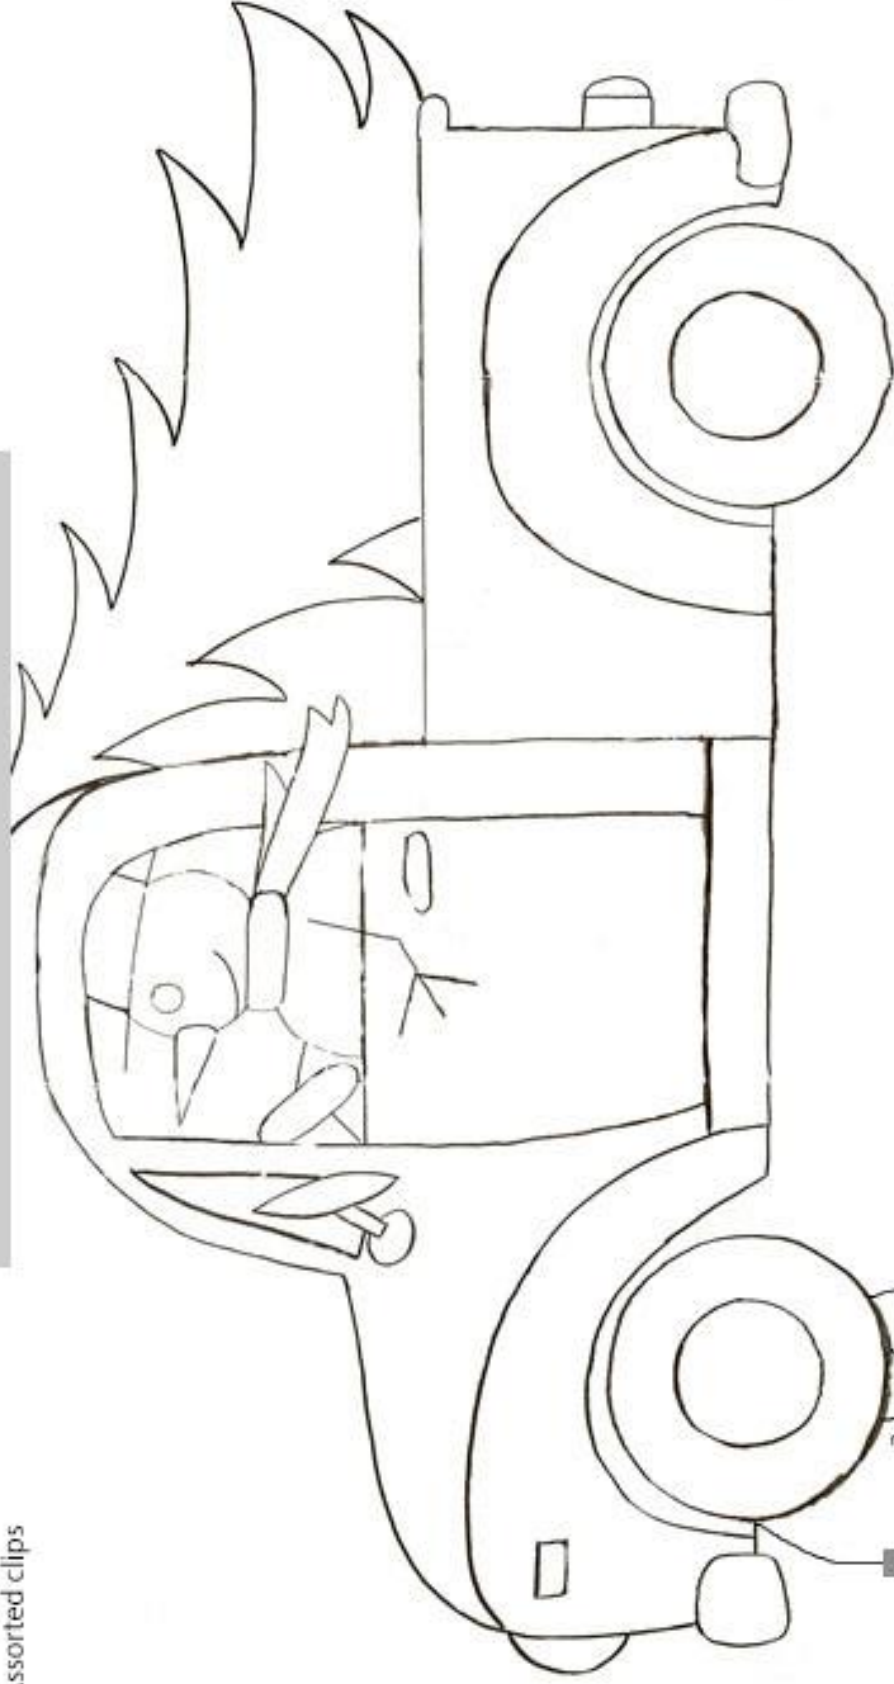

Plug the Green 1 into Green 1
 Plug Red 2 into Red 2,
 Plug Yellow 3 into Yellow 3

