

Wise Men Still Seek Him Instructions

Please check that you have all parts. (Located in attached bag)

- 6 ground stakes
- 1 pkg of asst. color clips (replacement)
- 1 gray 2 point controller
- 4 wing bolts
- 1 collapsible support pole

Take entire display out of box. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This display may need extra support which is not included.

1. Plug in Wise Men Still Seek Him (not the cross and star) into an extension cord as directed in photo below. You will notice these plugs are not marked.
2. Plug in animated parts (cross and star). First plug the controller into an extension cord. Each plug is marked either Green 1 or Red 2. Plug Green 1 male plug into the controller plug marked Green 1. Plug the male plug marked Red 2 into Red 2 on the controller.
3. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers. See our website for ideas on how to protect your controller.

