

Elf Decorating Christmas Tree

Please check that you have all parts. (Located in attached bag)

- 4 short ground stakes, 4 long ground stakes , and 2 extra long ground stakes
- 1 wing bolts
- 1 pkg. of asst color clips (replacement)
- 1 gray 4 point controller
- 1 cord set

1 cord extension

Unfold display being careful not to stretch any attached wires. There is one hinge on the display. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This display may need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. First lay cord set on ground Plug cord set into an extension cord.
2. Plug elf into first female plug on the cord set.
3. Then plug controller into 2nd female plug on cord set.
4. Plug Outer part of tree (unmarked male plug) into last female plug on cord set.
5. Each set of red balls have a male plug that is numbered Green 1, Red 2, Yellow 3, or Blue 4.
6. Plug the Green 1 into Green 1 of the controller; plug Red 2 into Red 2, Yellow 3 into Yellow 3 and Blue 4 into Blue 4.
7. Adjust speed to your liking.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

