


# North Pole Fire Engine

Unfold display being careful not to stretch any attached wiring. If there are hinges on the display attach two small plates at hinge together with a wing bolt and wing nut. Attach ground stakes into tubes at the bottom of the display and secure with a wing nut. Push ground stakes gently into the ground. You can do this with your foot using a back and forth motion to inch each side gradually into the ground.

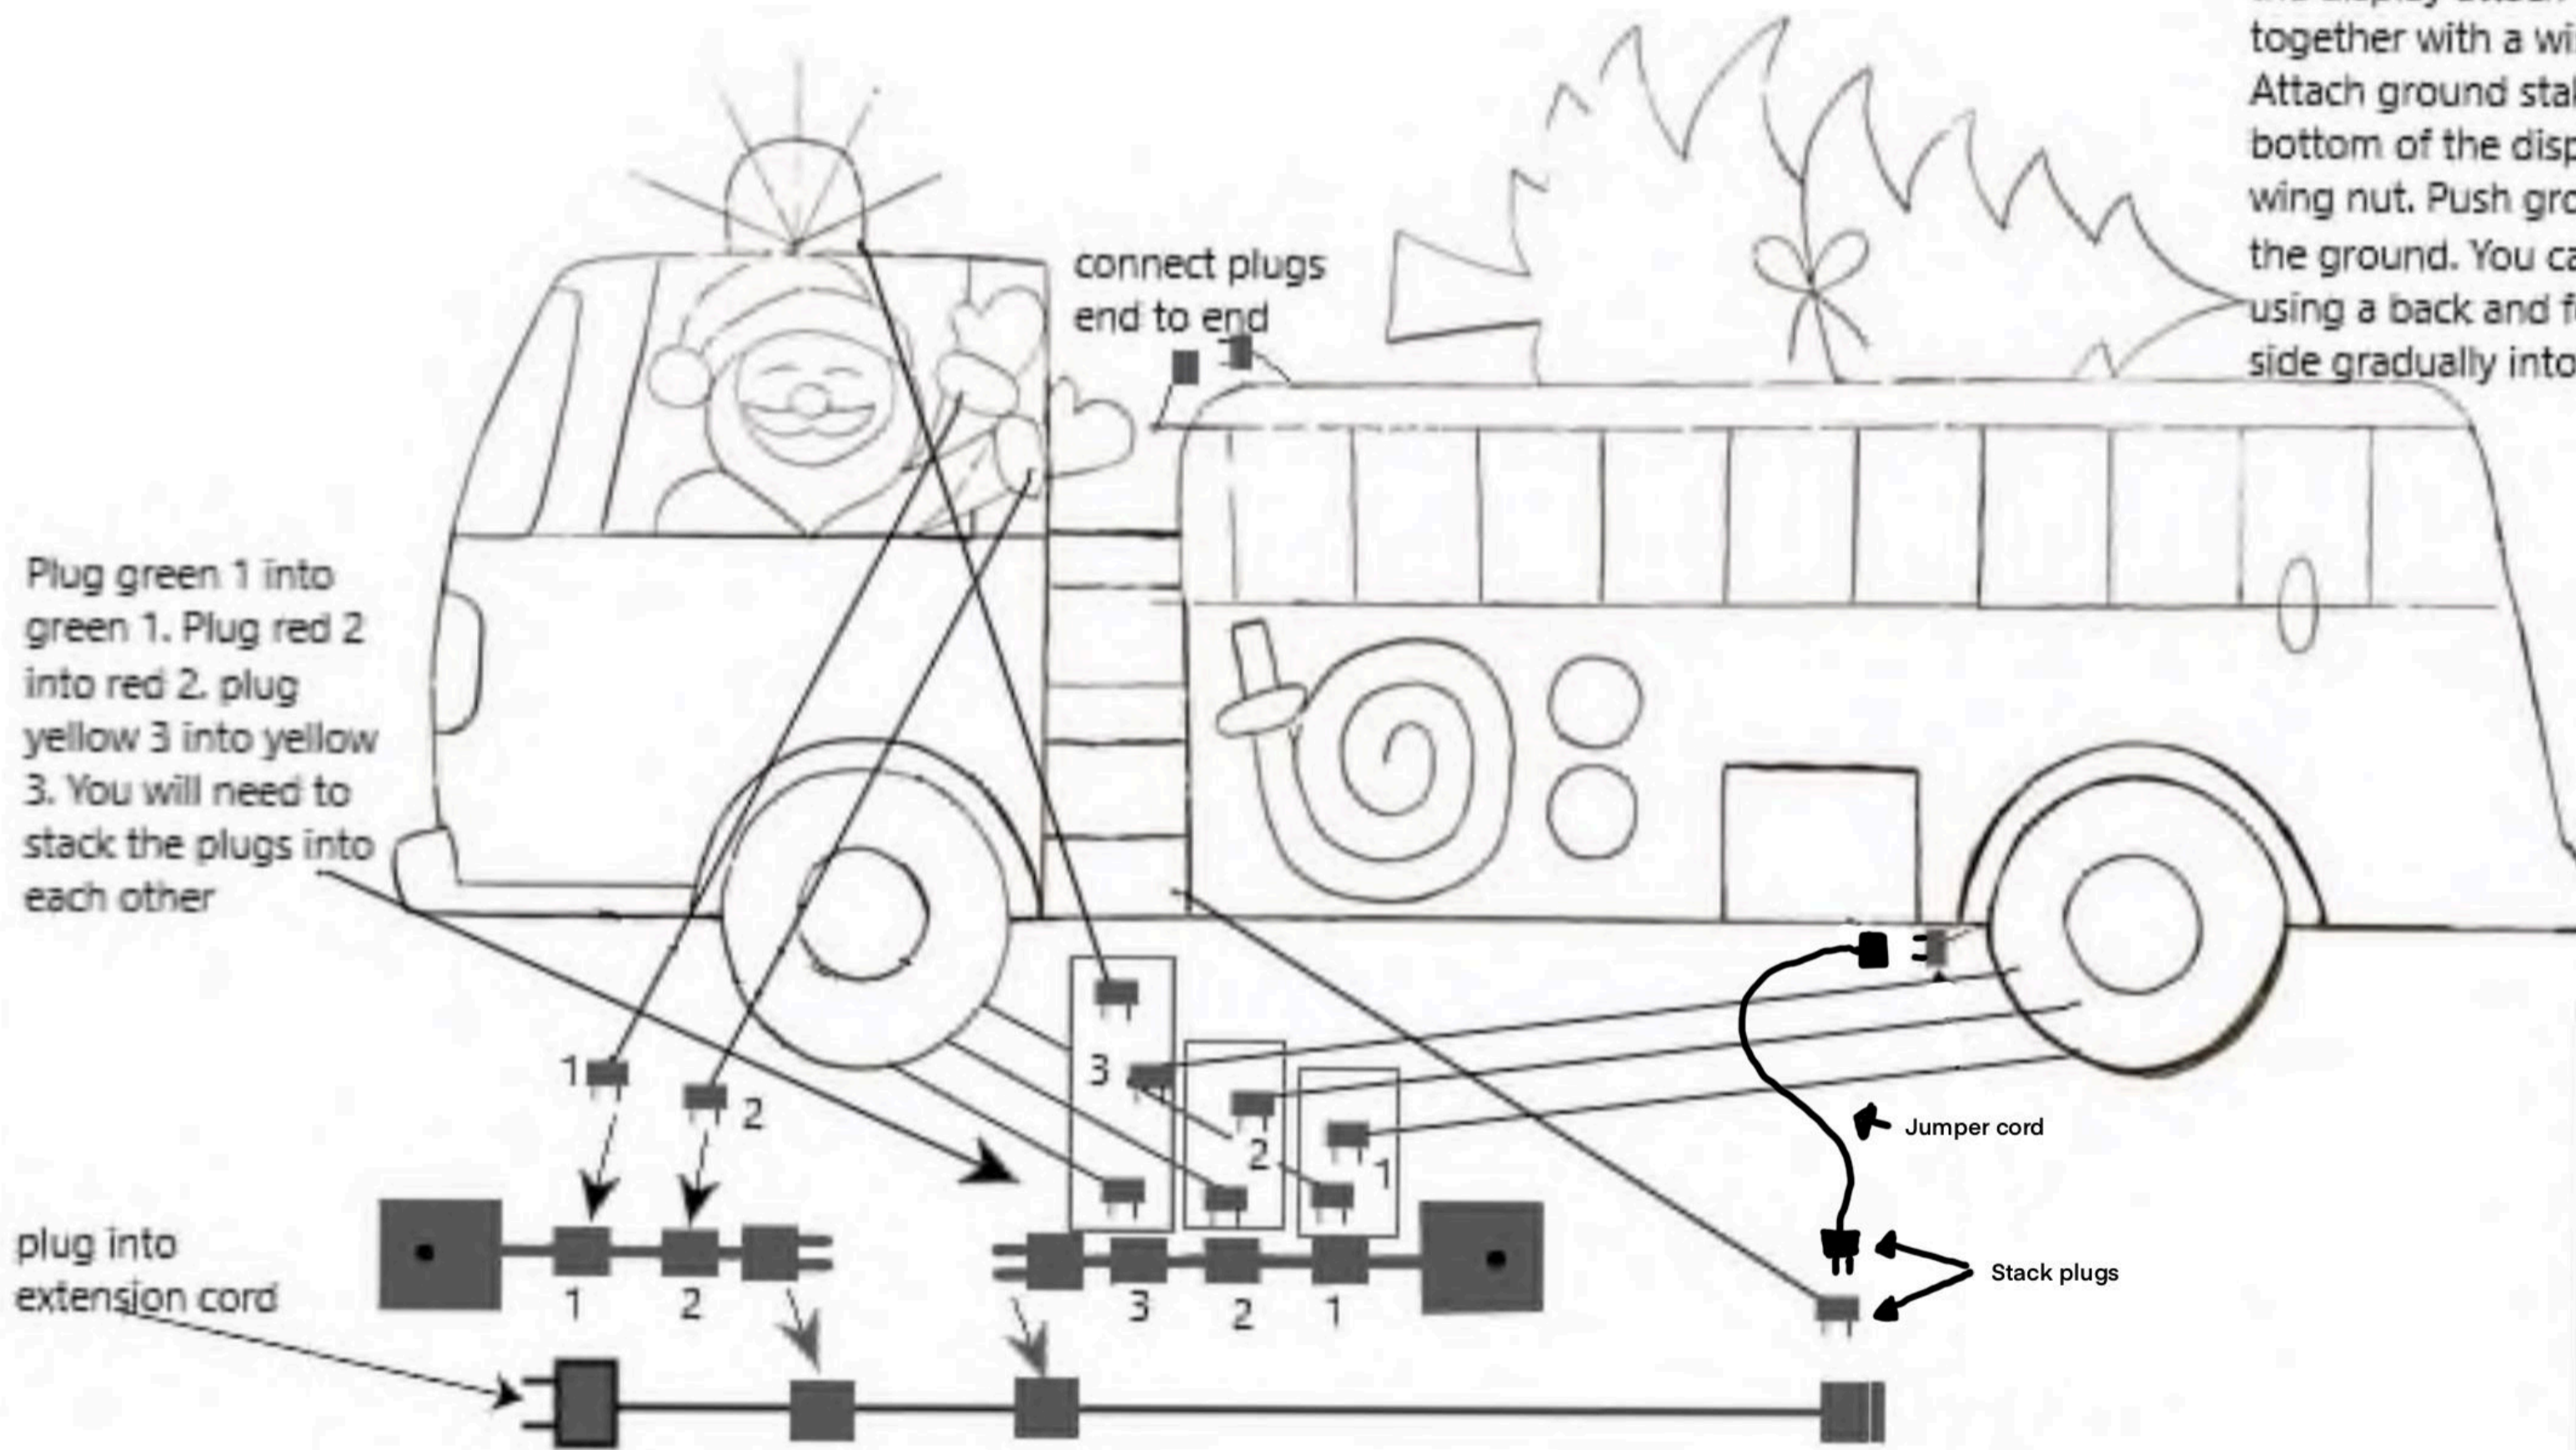

Plug green 1 into green 1. Plug red 2 into red 2. plug yellow 3 into yellow 3. You will need to stack the plugs into each other

connect plugs end to end

plug into extension cord

Jumper cord

Stack plugs

Please check that you have all parts and extra clips (located in attached bag).

- 3 Ground Stakes
- 6 Wing bolts
- 9 Wing Nuts
- 1 Cord set
- 1 2-point controller
- 1 3-point controller

1 Jumper cord