AWAY IN A MANGER INSTRUCTIONS

Please check that you have all parts. (Located in attached bag)
- 6 ground stakes with wingnuts
- 1 pkg of asst, color clips (replacement)
- 1 Wingbolts with nuts
- 1 Color Change Remote

This item mayneed extra support which is not included.

Unpackage and Unfold display. Attach two small metal plates together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by placing them into the bottom provided slots and use wing nut to tighten. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Plug in BOTH ANGELS AND BABY JESUS (3 PLUGS TOTAL) to an extension cord.
2. Plug HALO into an extension cord.
3. Use the color change remote (as pictured) to create glowing Halo effect.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

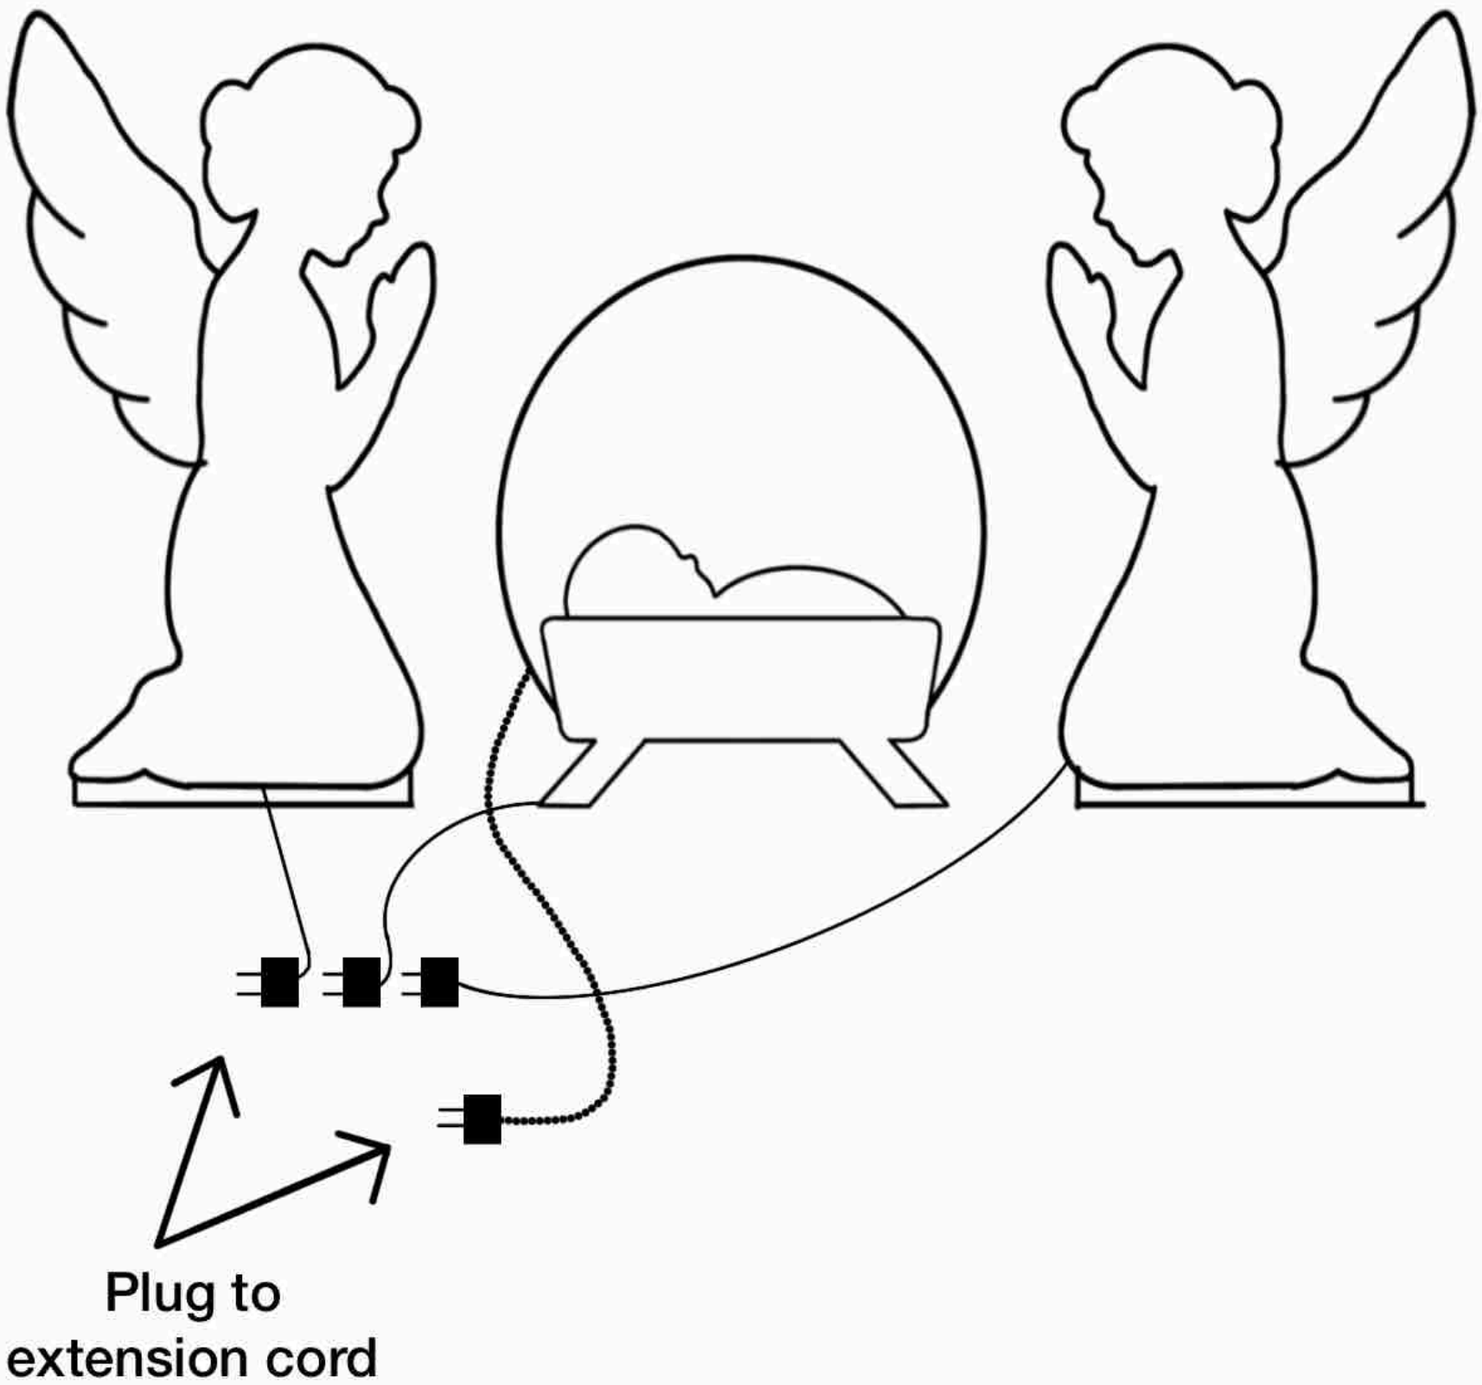

Plug to
extension cord



For glowing halo effect,
press these buttons.