Disco Elf INSTRUCTIONS

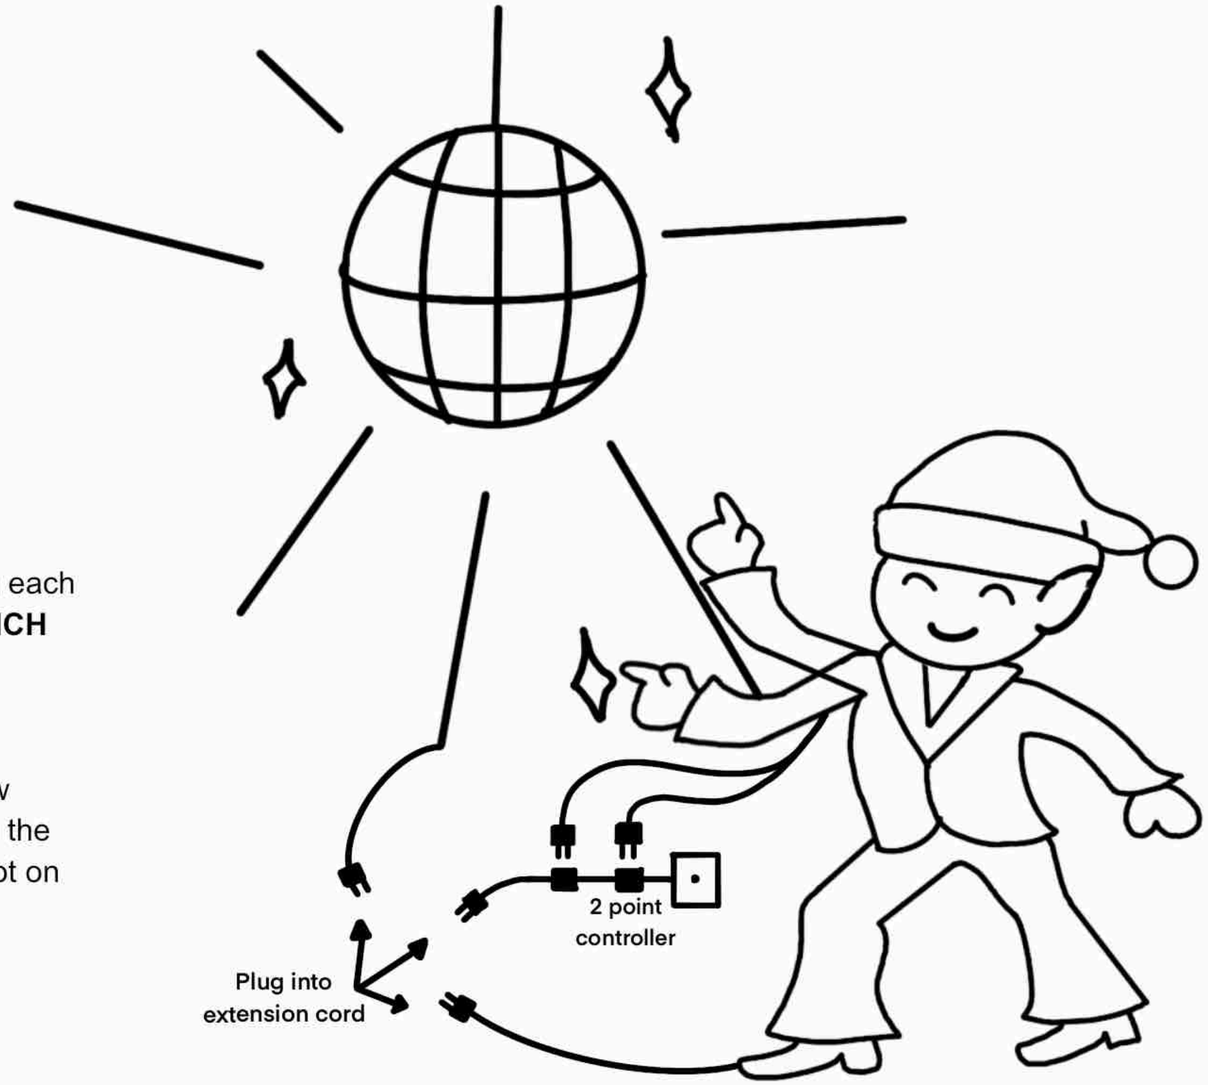

Unfold display being careful not to stretch any attached wires.

Attach two small metal plates at hinge together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by placing them into the bottom provided slots and use wing nut to tighten. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. **THIS ITEM WILL NEED EXTRA SUPPORT WHICH IS NOT INCLUDED.**

1. Plug the decoration and controller up into an extension cord as pictured below
2. There are 2 plugs coming from the ELF ARM labeled Green1 and Red2. Plug the Green 1 into the Green 1 on the controller, and plug the Red 2 into the Red 2 slot on the controller.

Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

USE INCLUDED REMOTE TO CONTROL DISCO BALL